


## Ford Kuga 05/2008-


Partnr.: FR-040-DHU

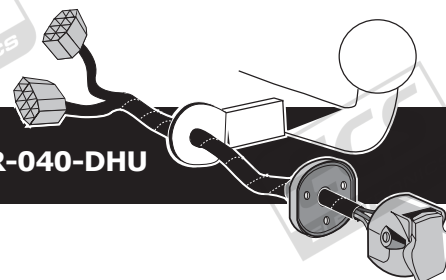


- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:  
[t.skinner@ecs-electronics.com](mailto:t.skinner@ecs-electronics.com) / 07440 202 052.




# Part list

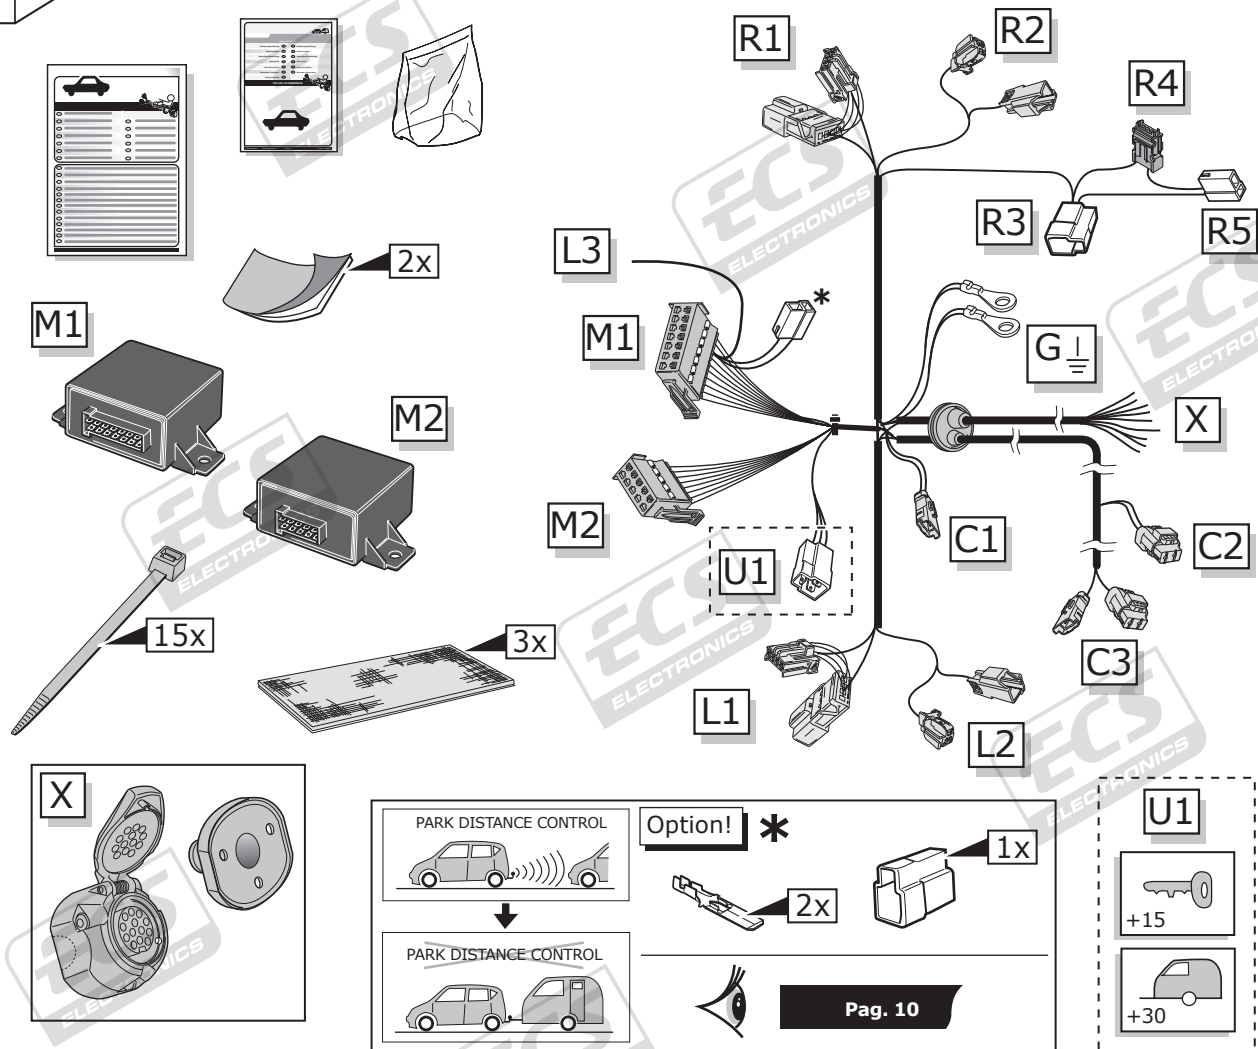


Pag. 10



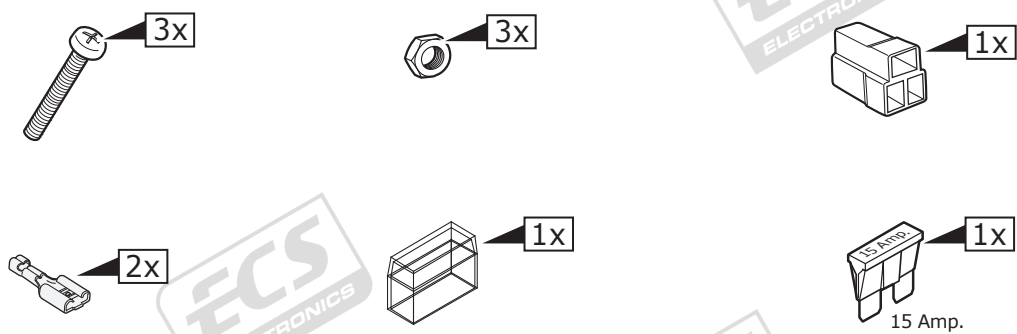


## ROUTING

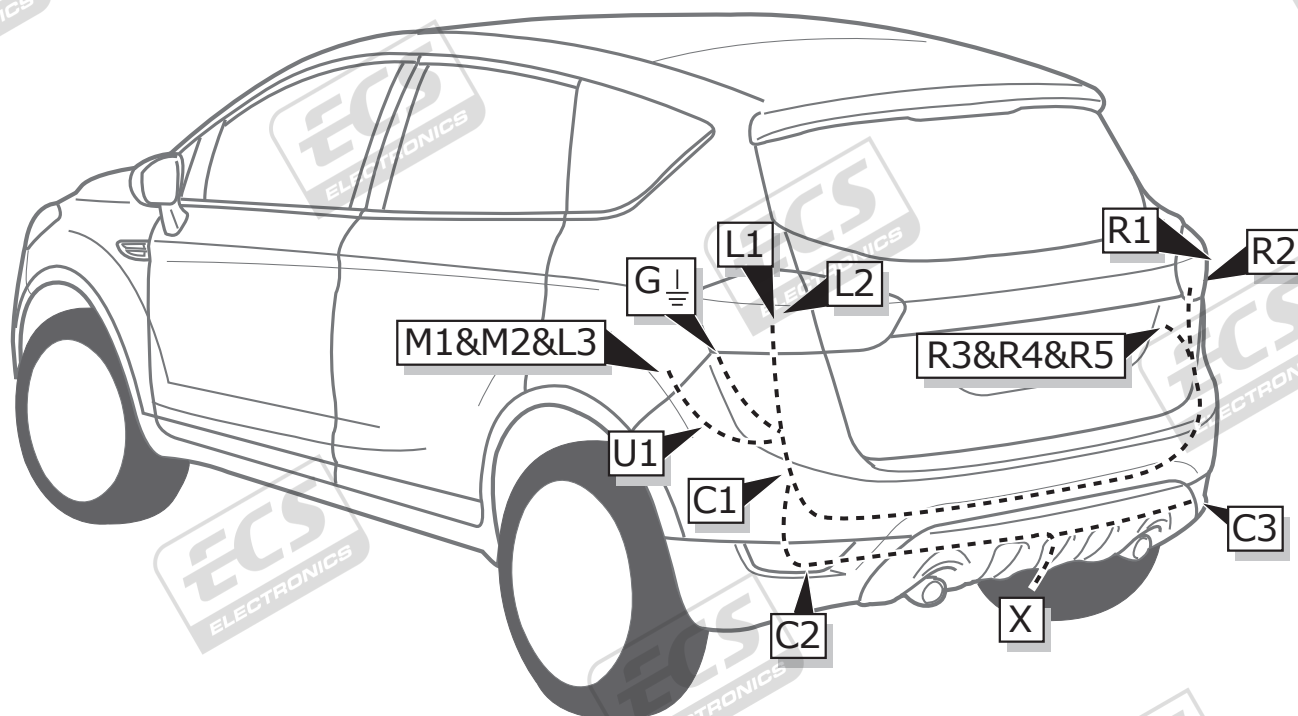


1

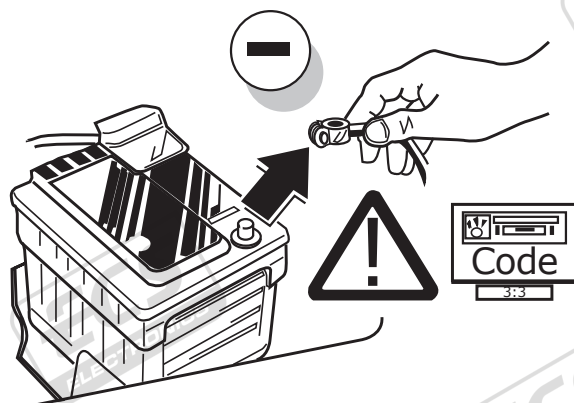

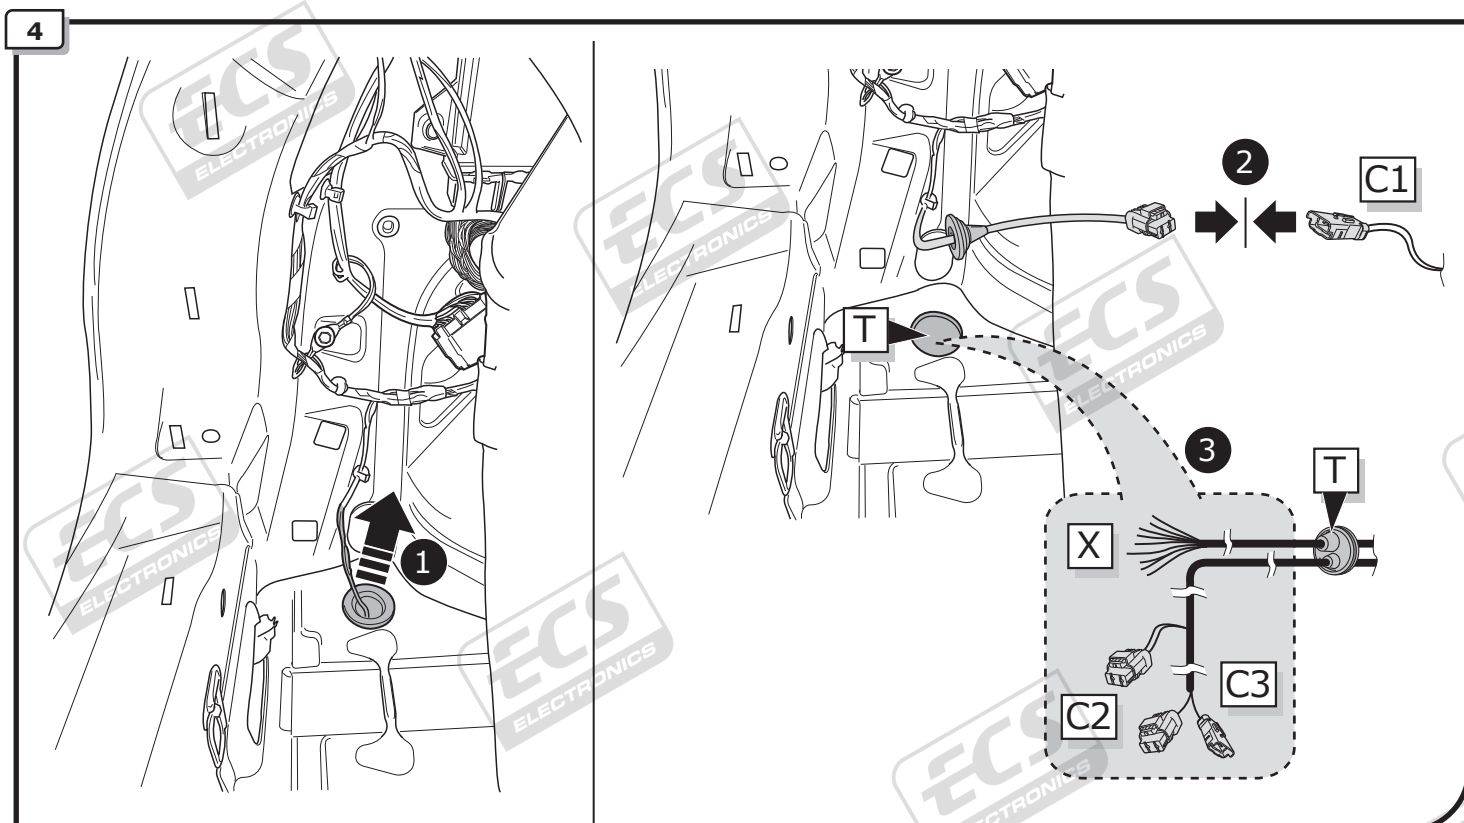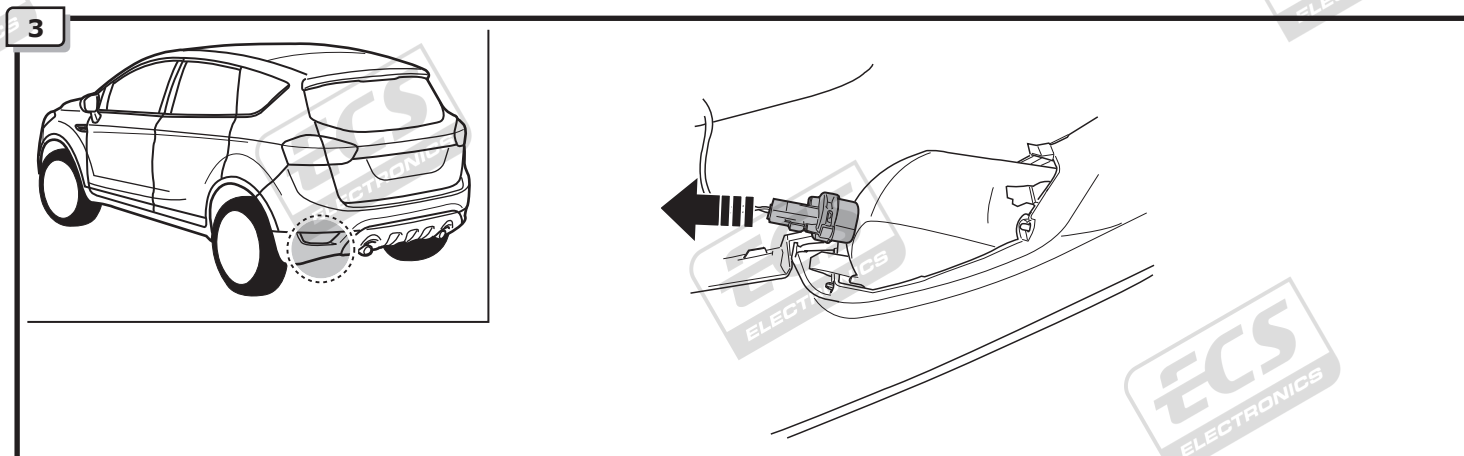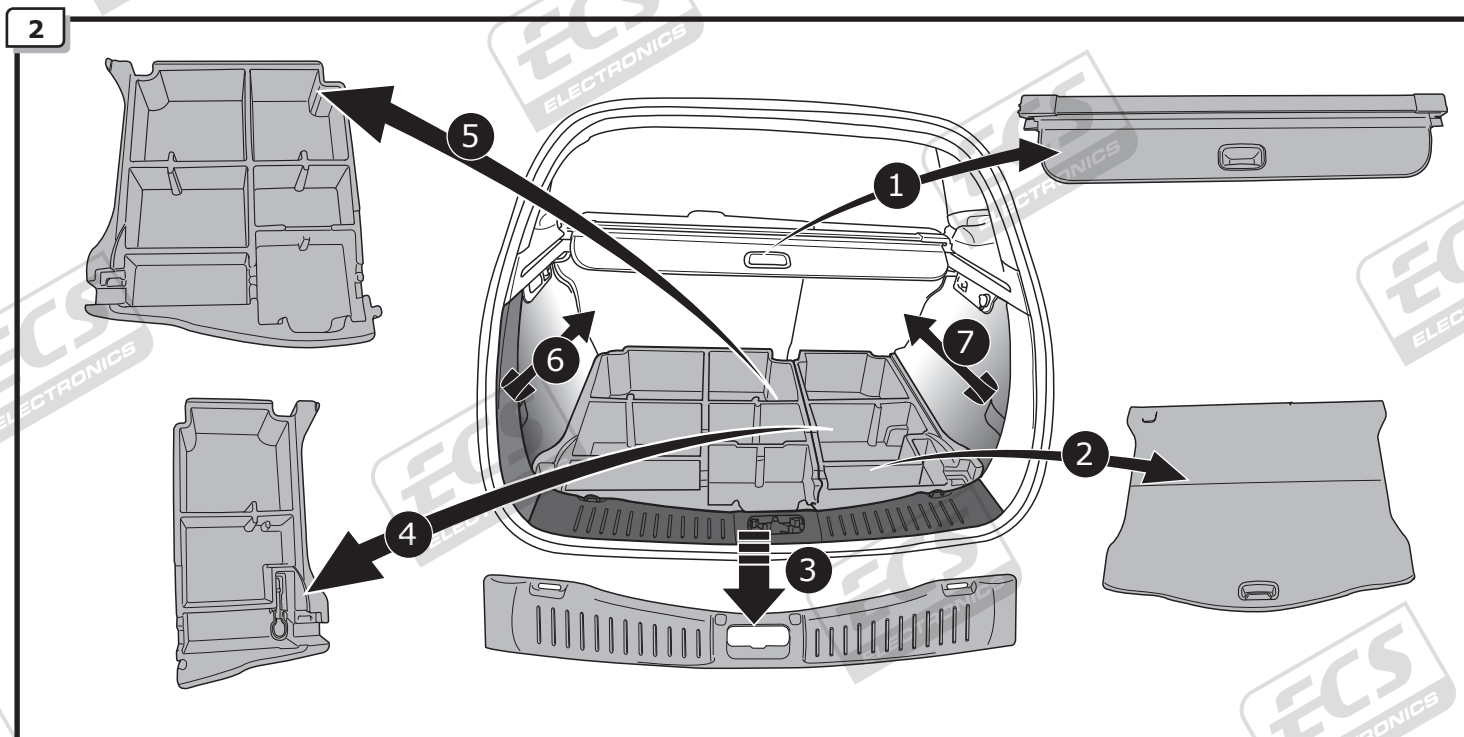

A

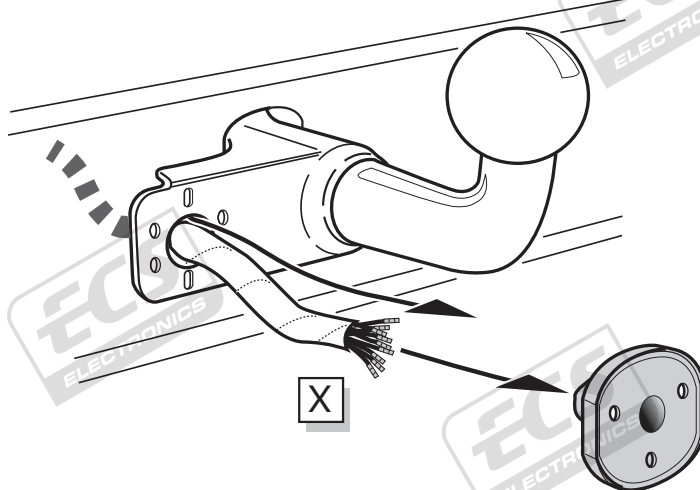



## INFO

SOCKET CONNECTION



Pag. 8

B

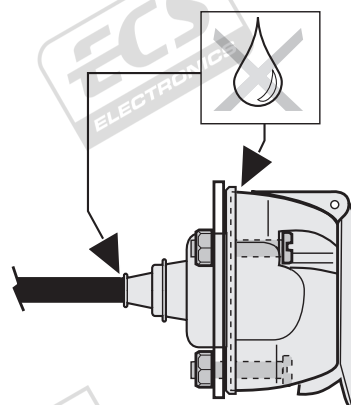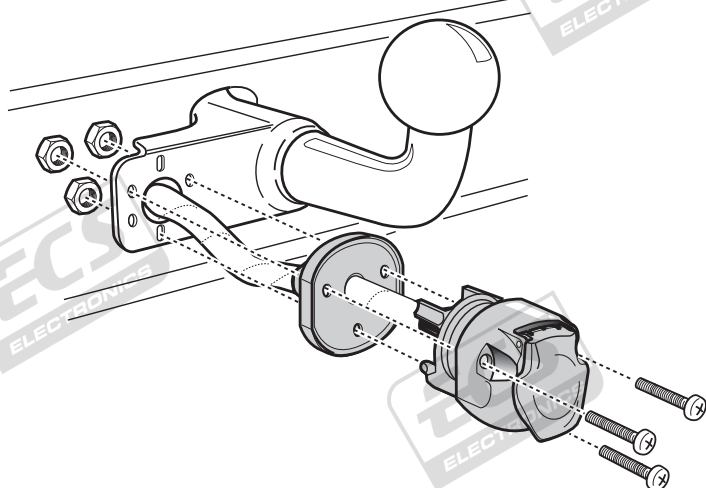






A line drawing of a car from a rear three-quarter view. A dashed circle highlights the rear door lock cylinder on the driver's side rear door.







A line drawing of a car from a rear three-quarter view. A dashed circle highlights the rear wheel arch trim cover, which is the plastic piece that covers the wheel well area.

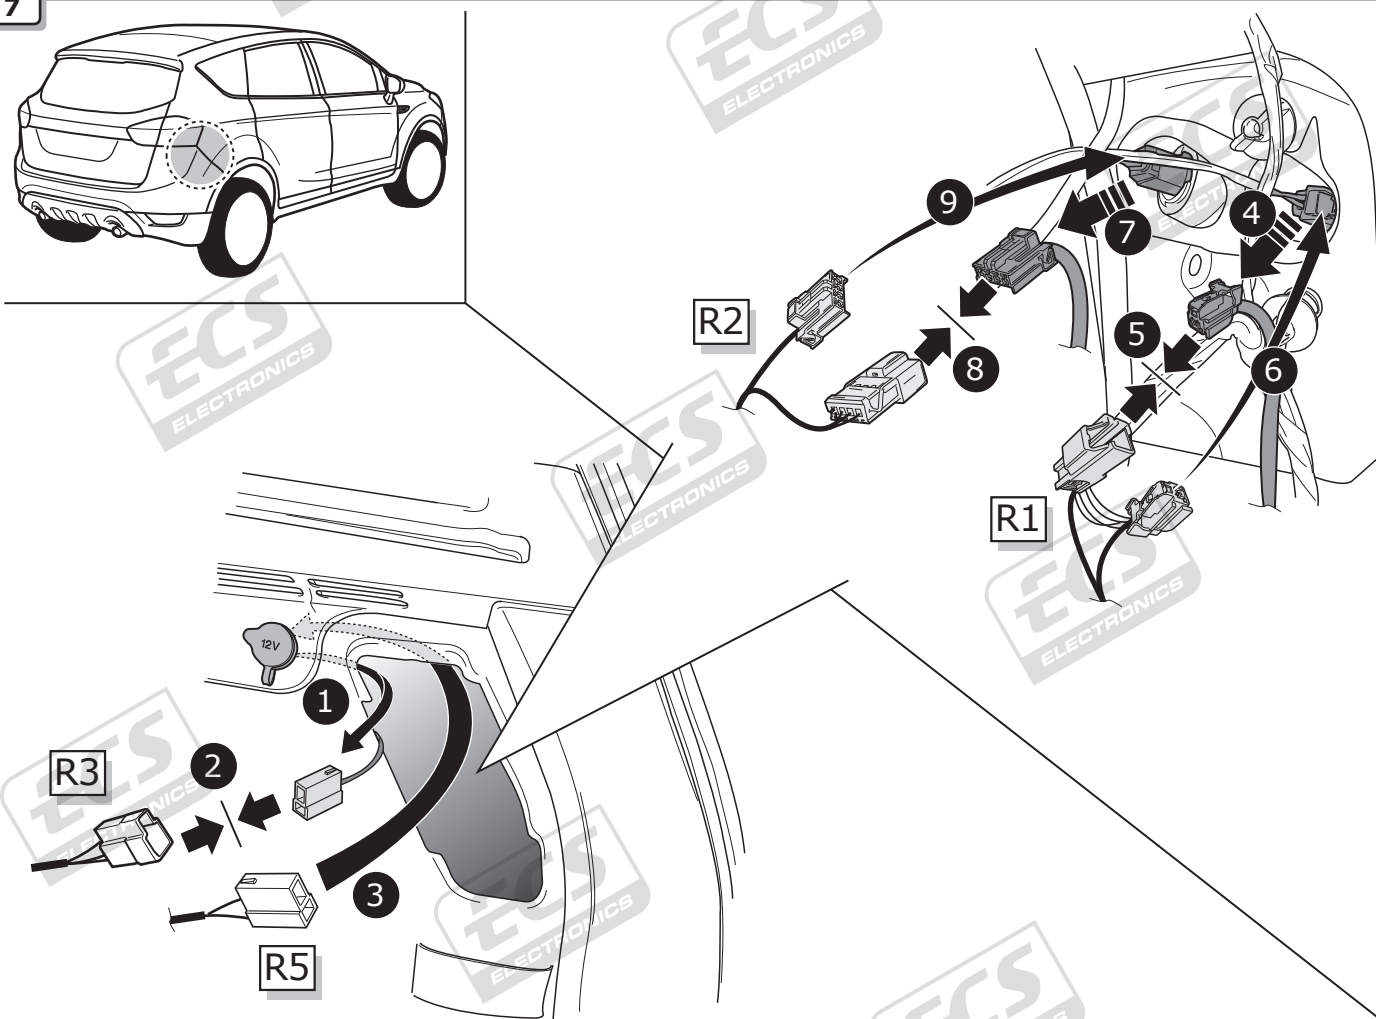







8

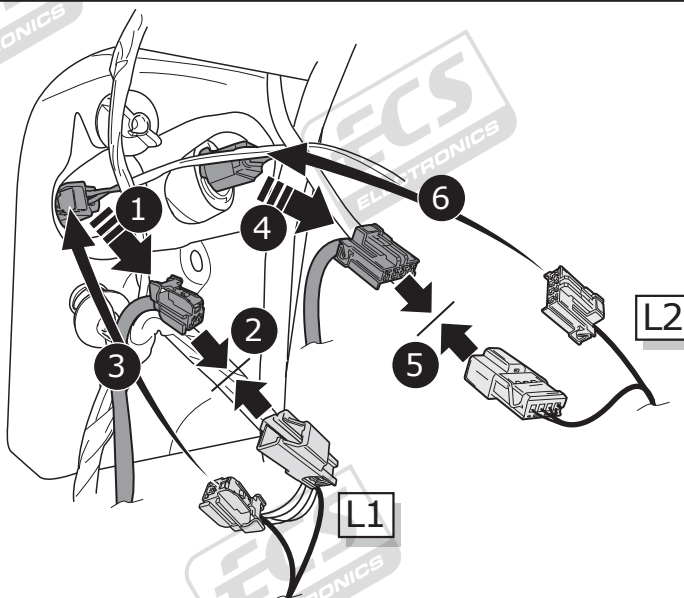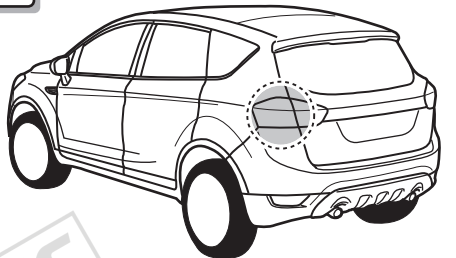


9

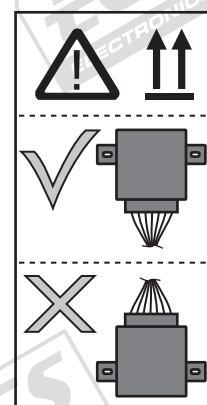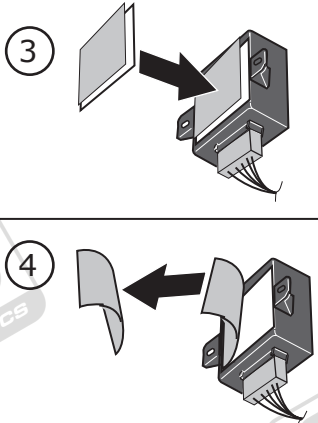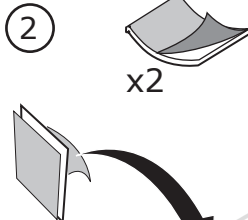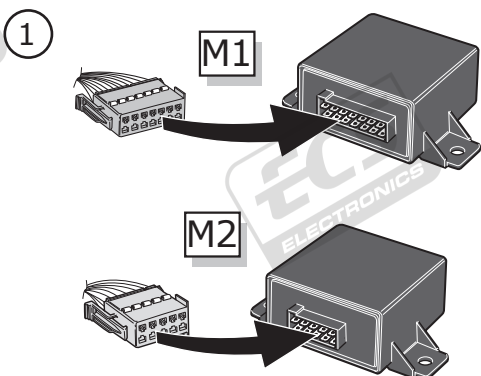


10

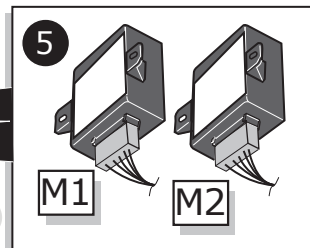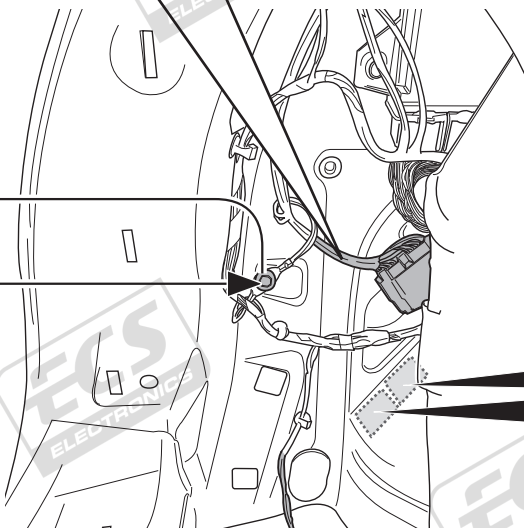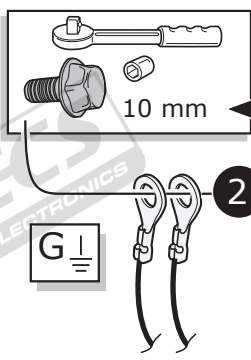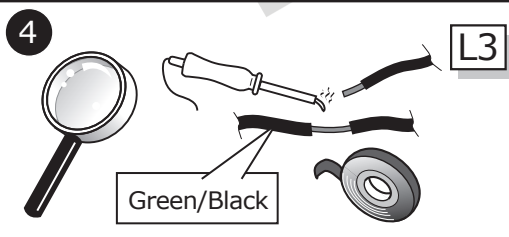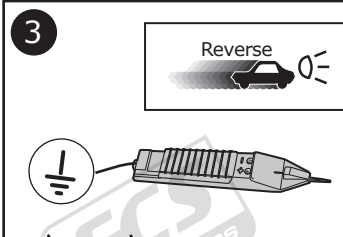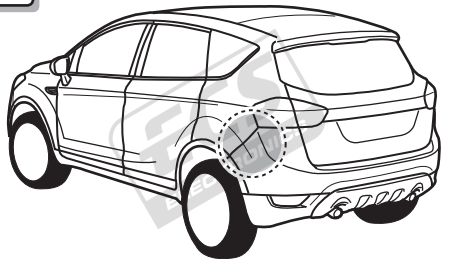

11

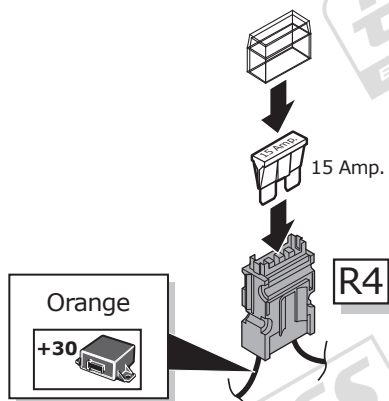

12

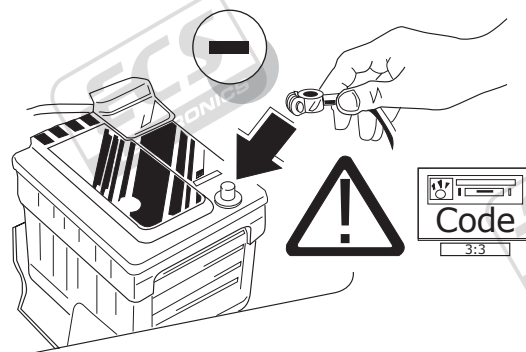


13

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

14

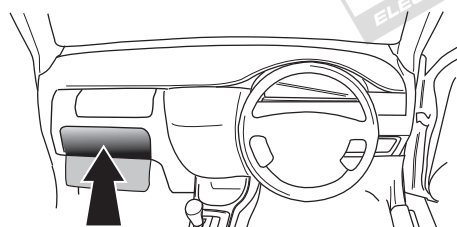









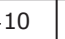
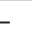



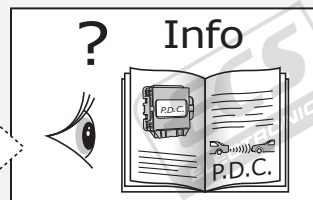
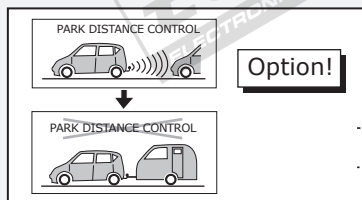
User guide

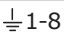





## SOCKET CONNECTION


DIN/ISO 11446													
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	2x21W		21W	52W	3x21W	52W	2x21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red 1,00 mm <sup>2</sup>	Black	Black/ Red	Brown/ White	Red 2,50 mm <sup>2</sup>	White	-	White




## Option 1

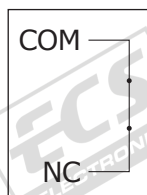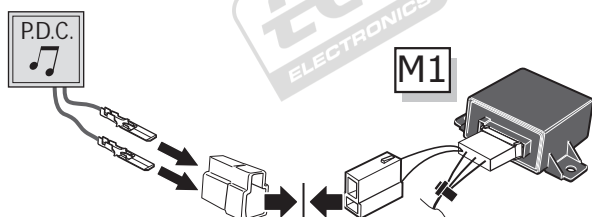


Normally closed

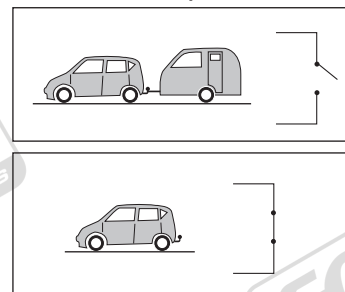

## Option 2

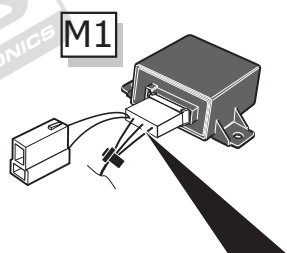


2

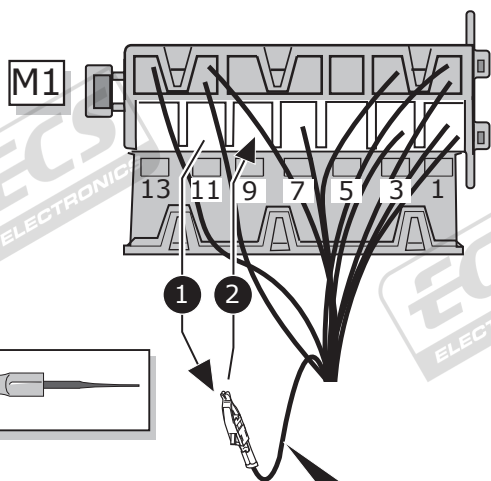


Green/White  
Pin 11 → Pin 9

1

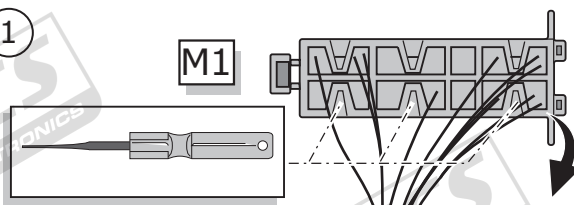


3

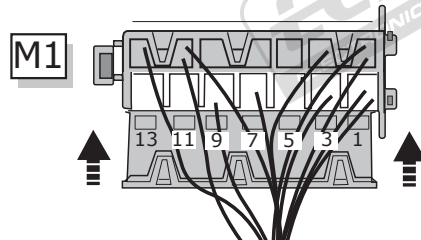

4

Normally open

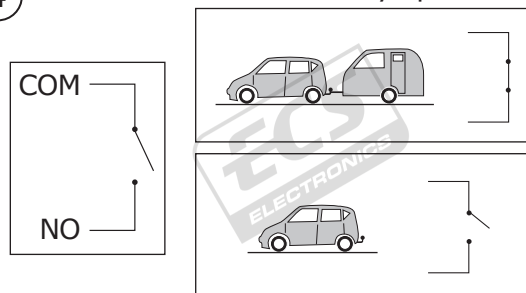

5

