







Volkswagen Crafter 2006 - 02/2017 Mercedes Sprinter 03/2006 -

Partnr.: VW-107-B1U






- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.




Part list

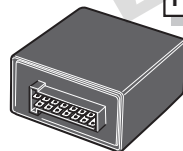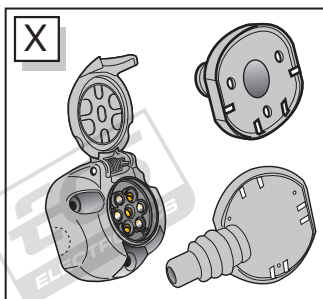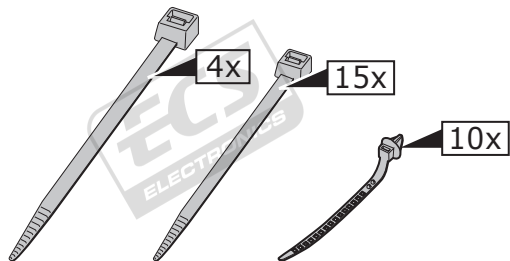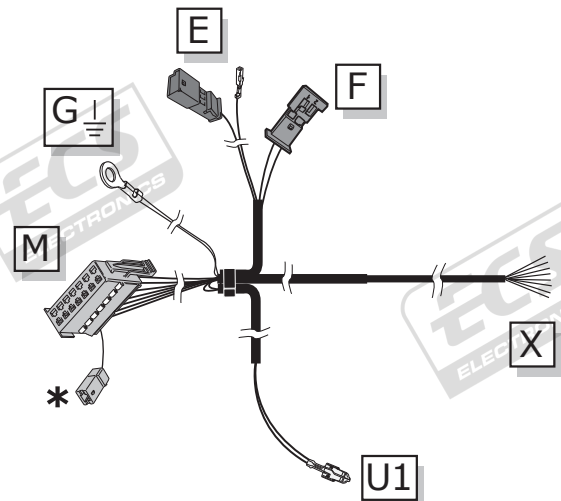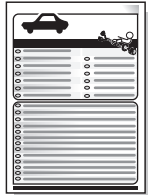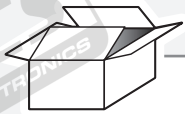


* Reverse signal preparation
 Pag. 12

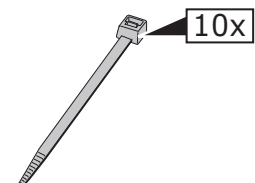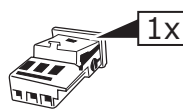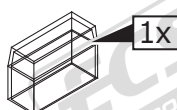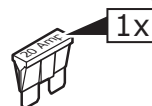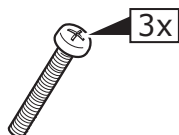



ROUTING

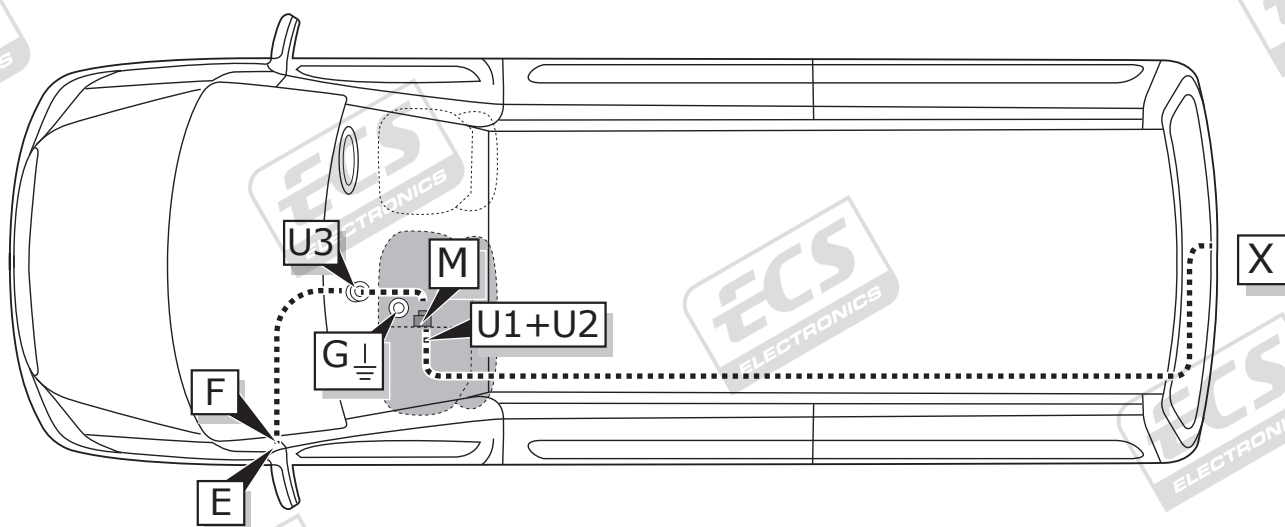



1

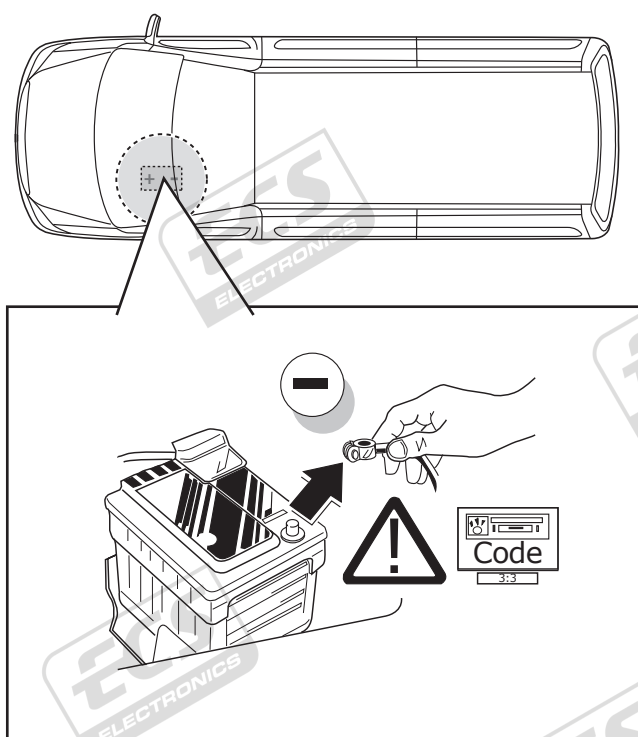



2

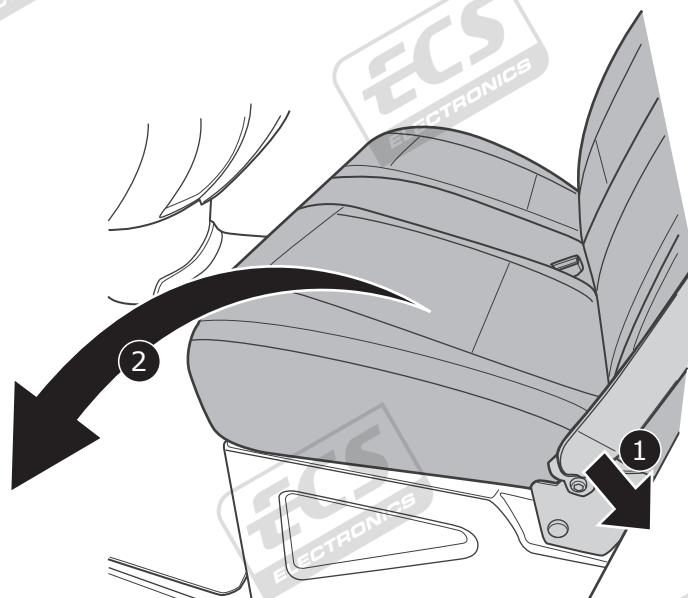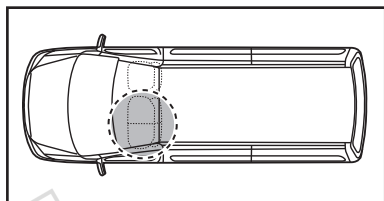


3

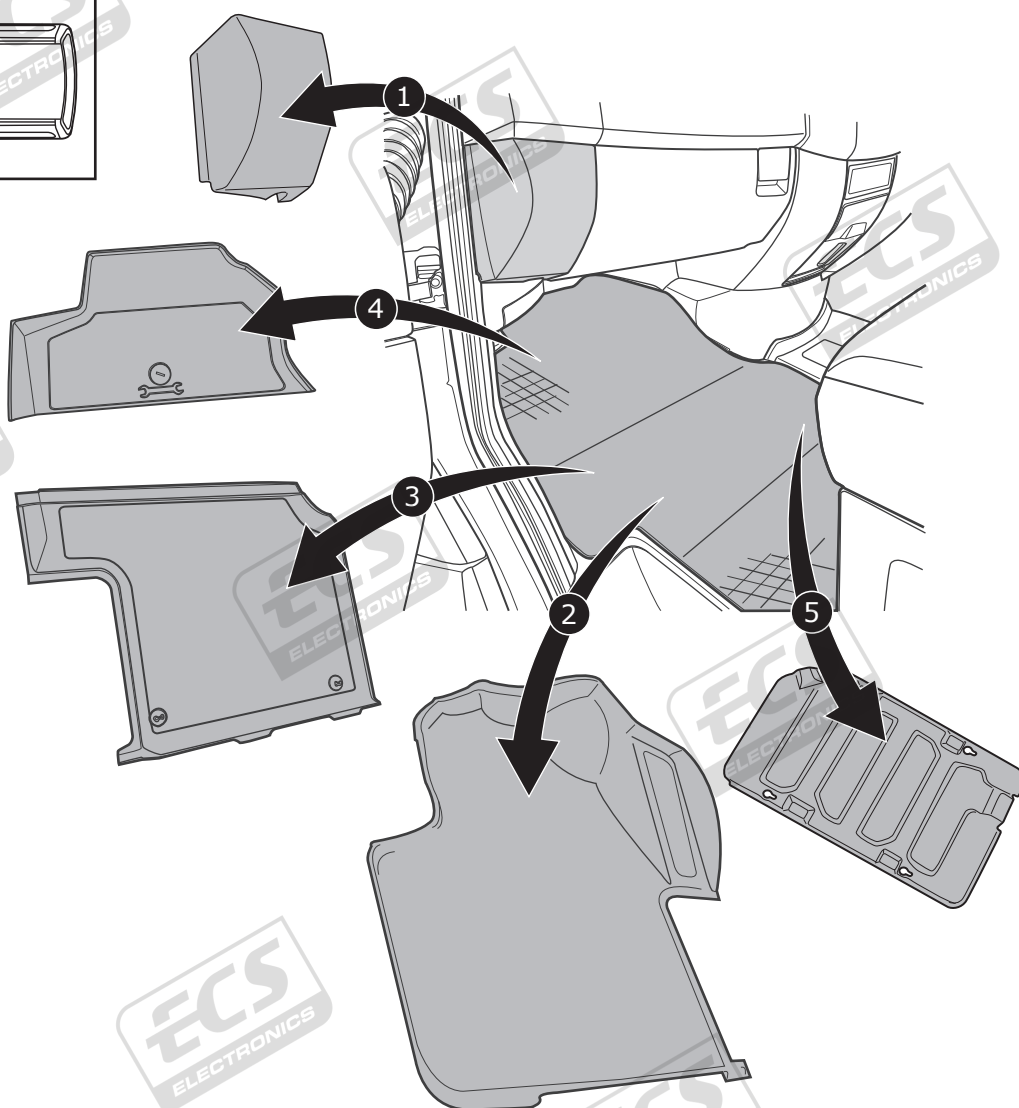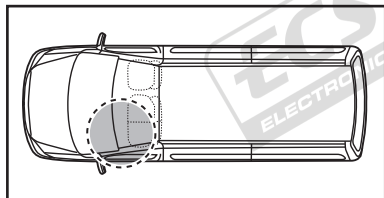


4

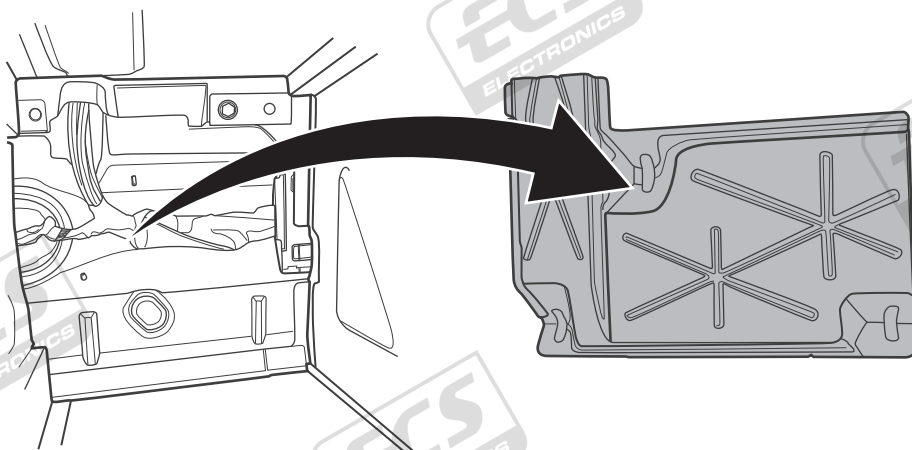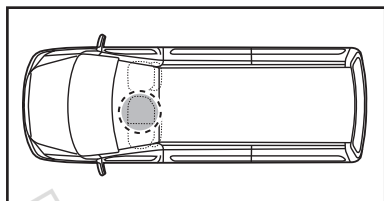


5

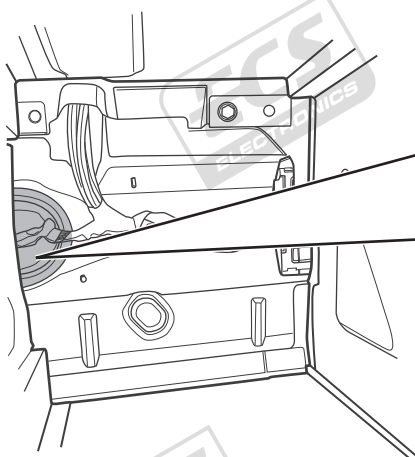

Underside

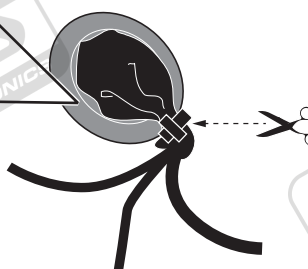


1

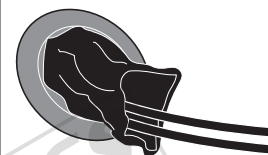

2

3

6

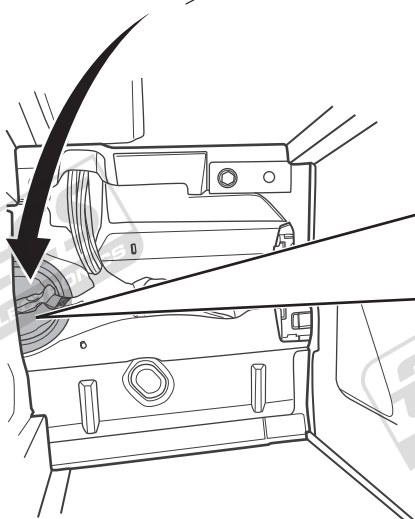


1





Underside

2

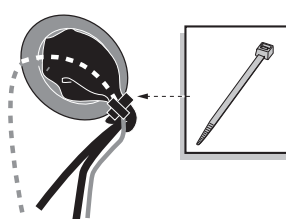


3


15x

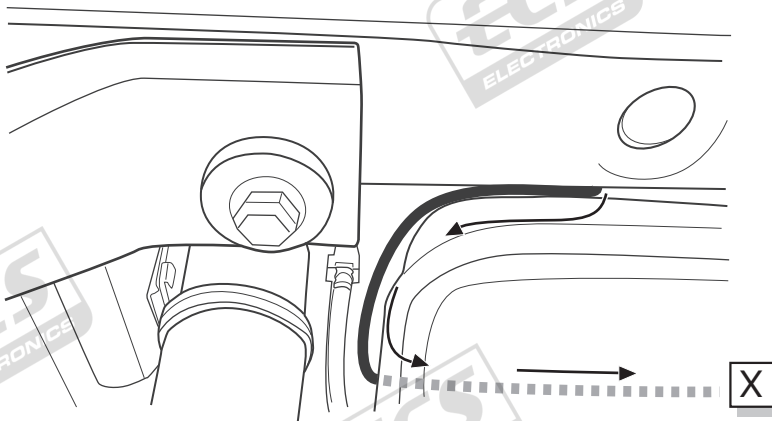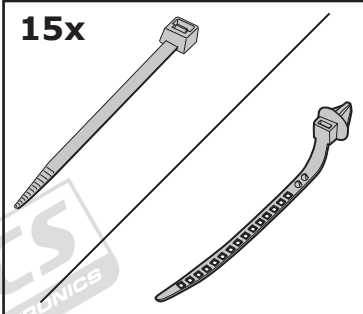






1

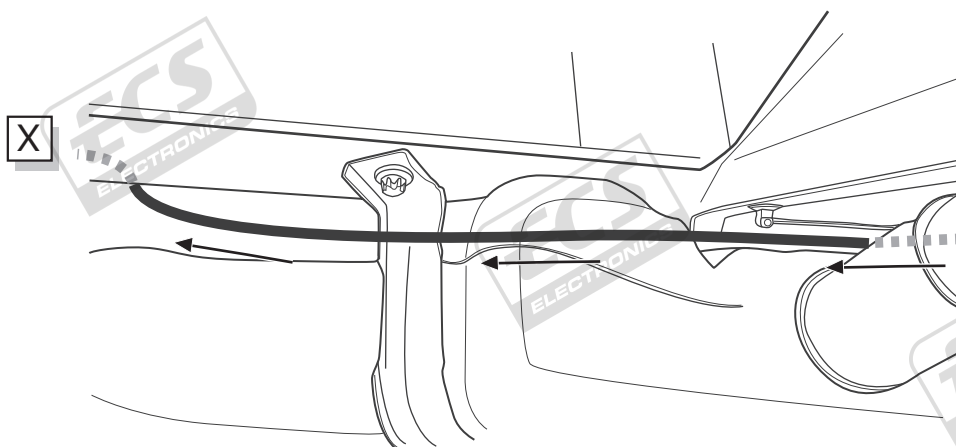


2

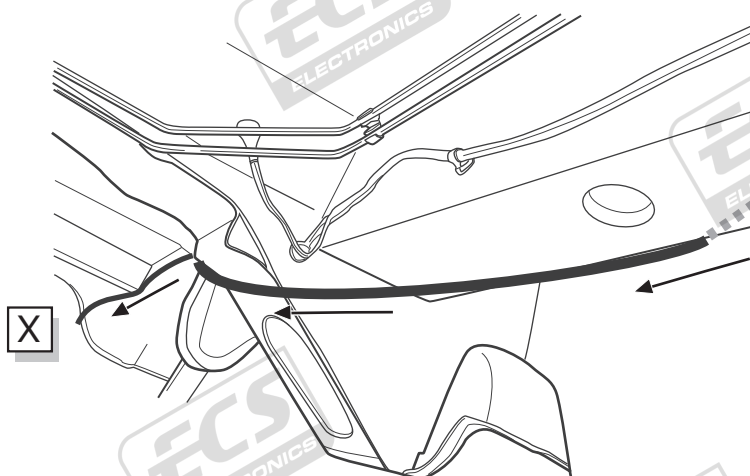


3

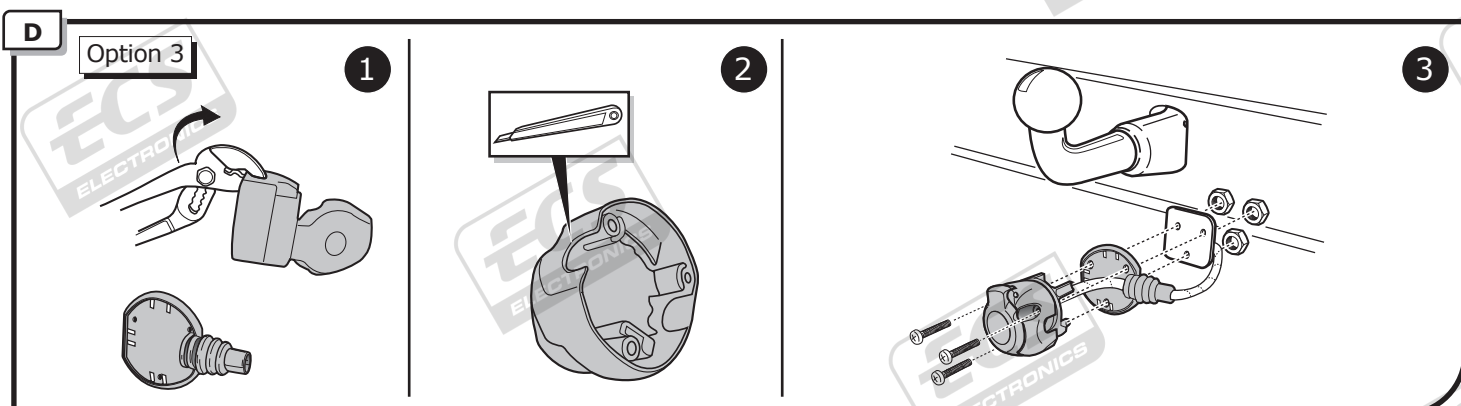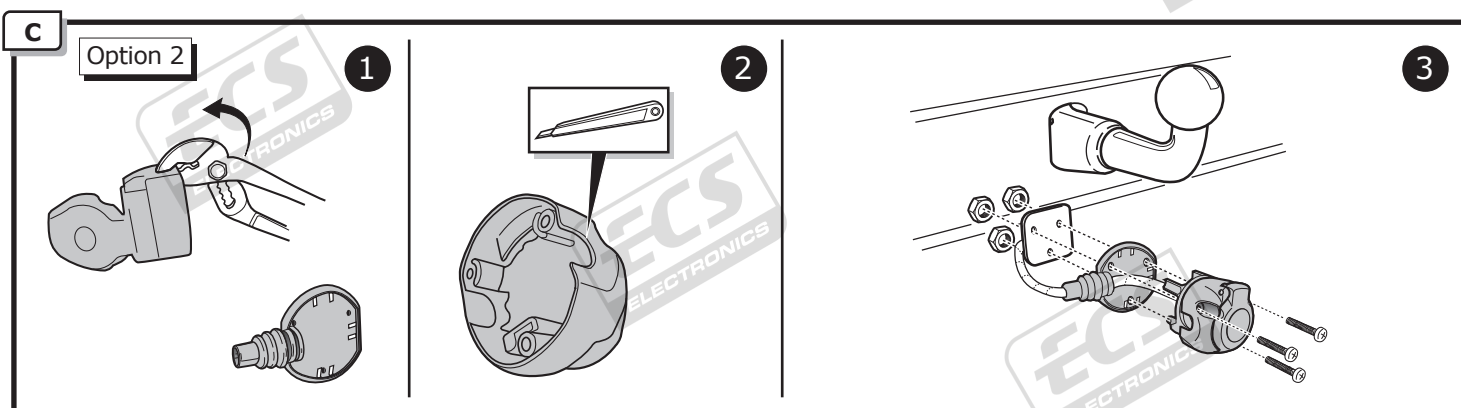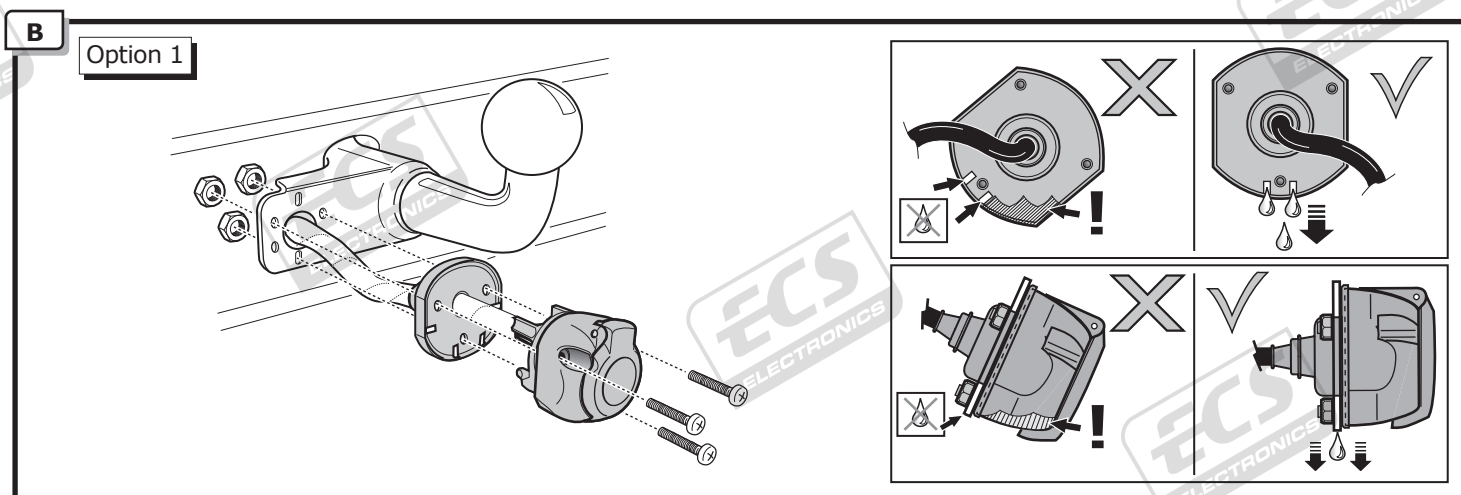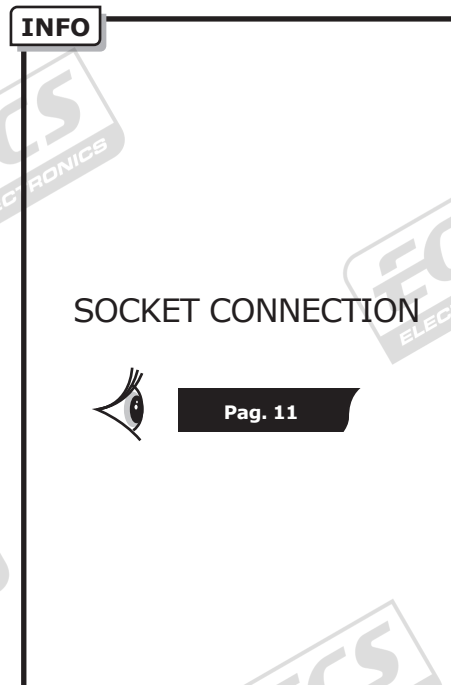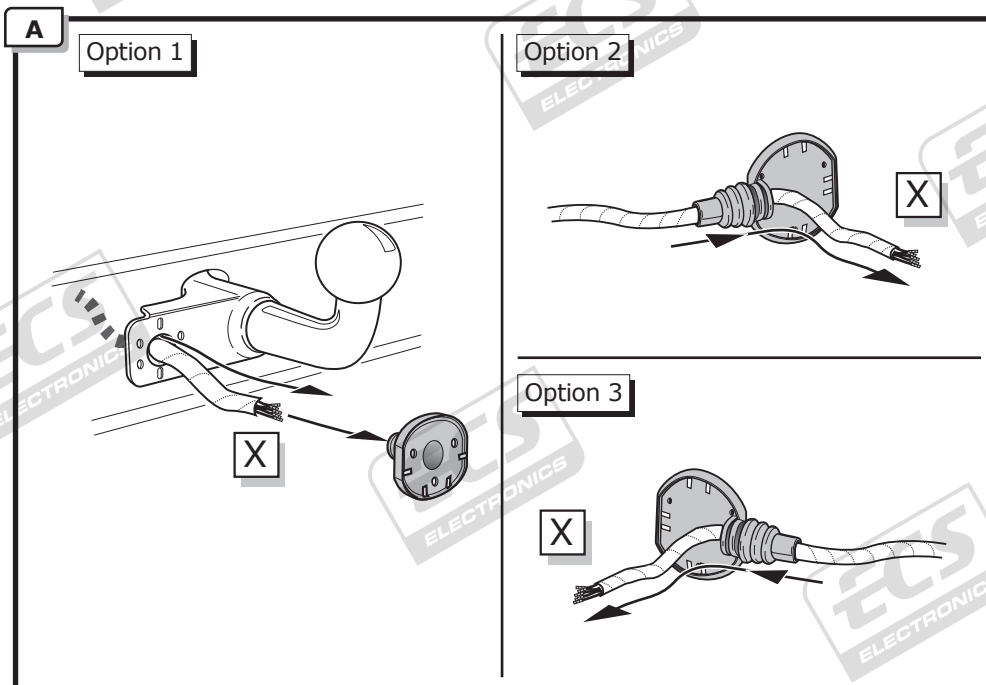

8

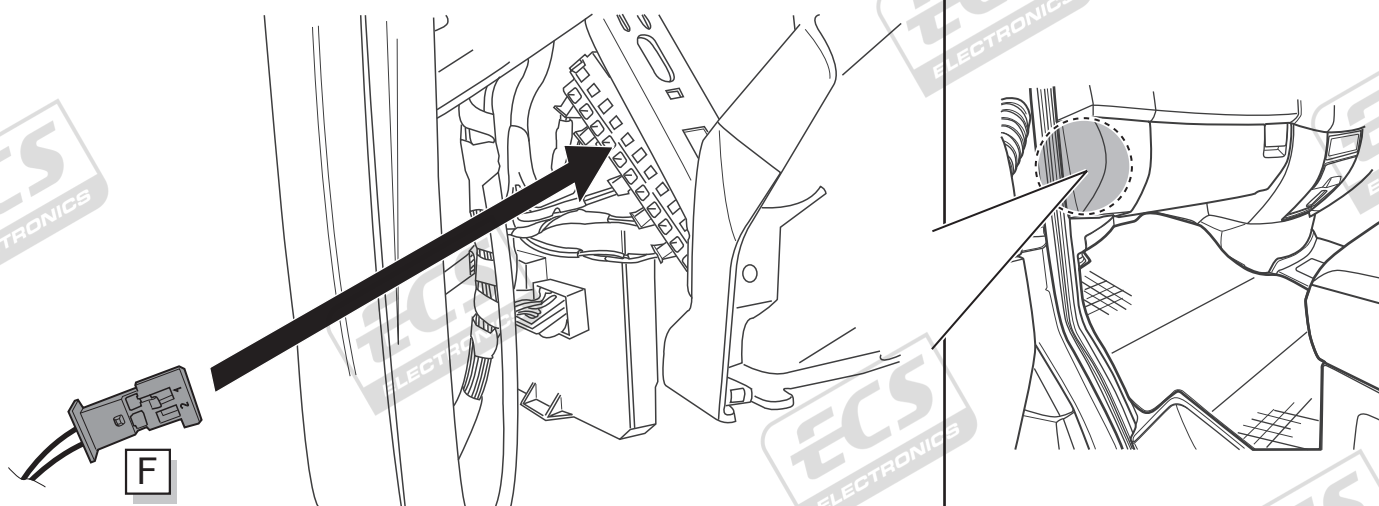


9

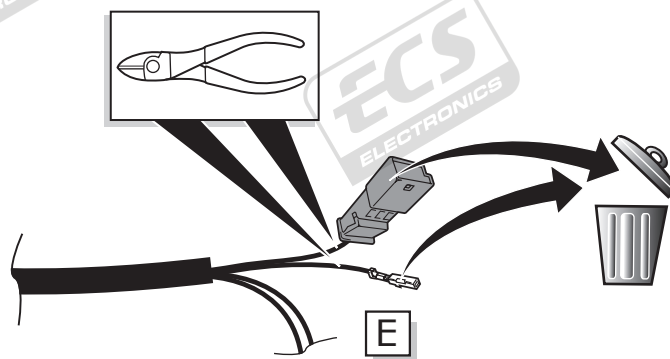

This connection is no longer needed.



1

2

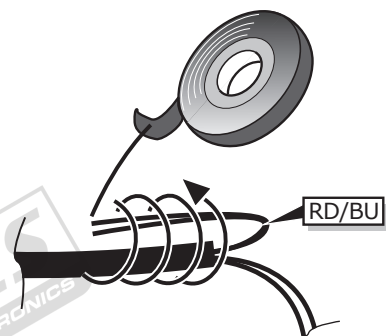


Please Isolate.

10

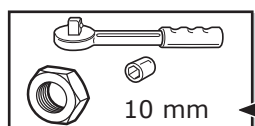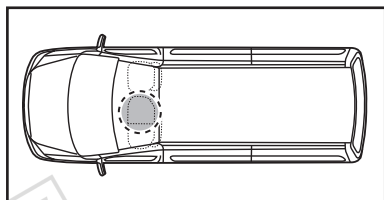



1

2

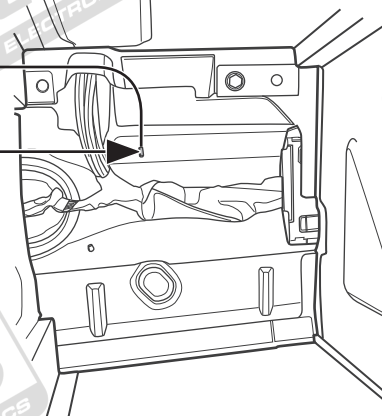


11


1

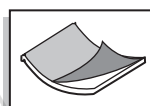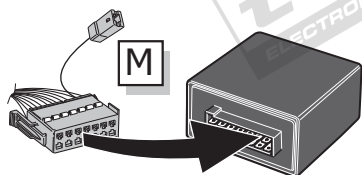



2

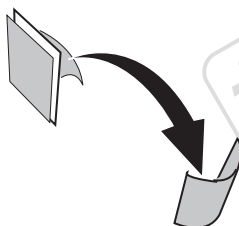




3

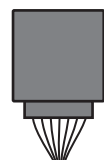


4

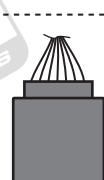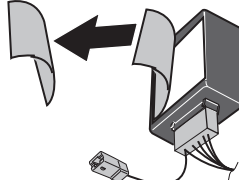



12

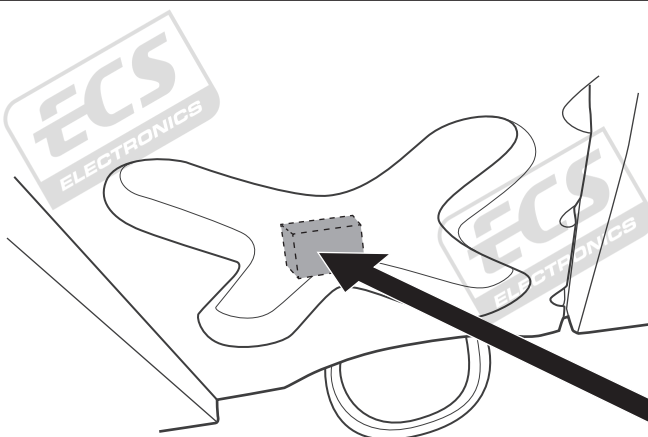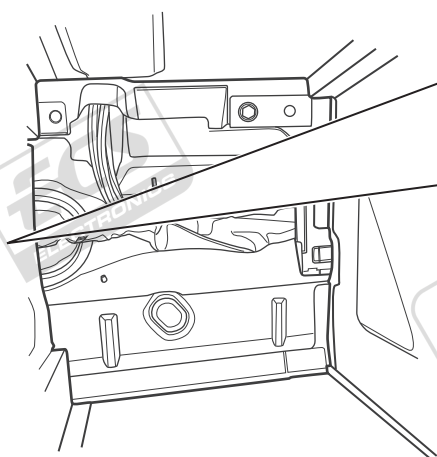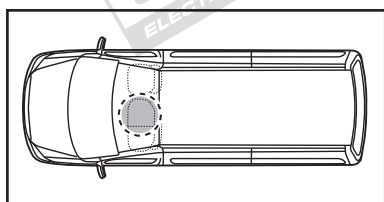



M

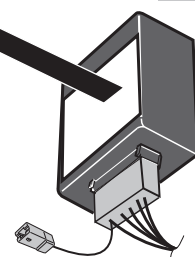



13

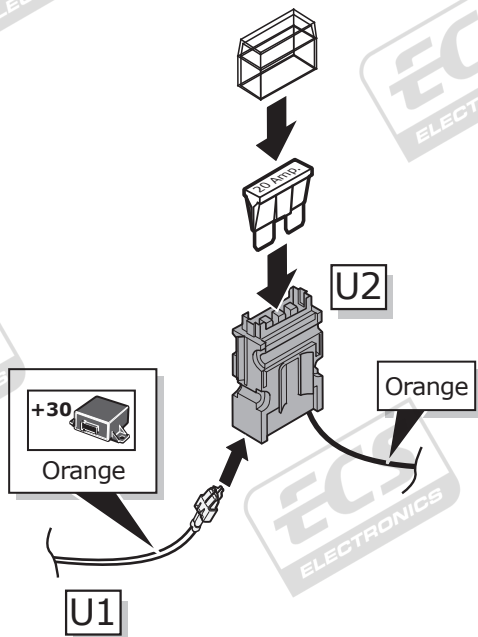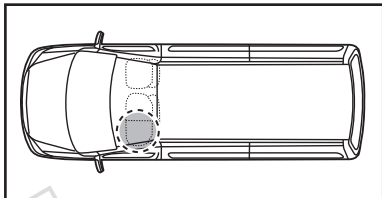

14

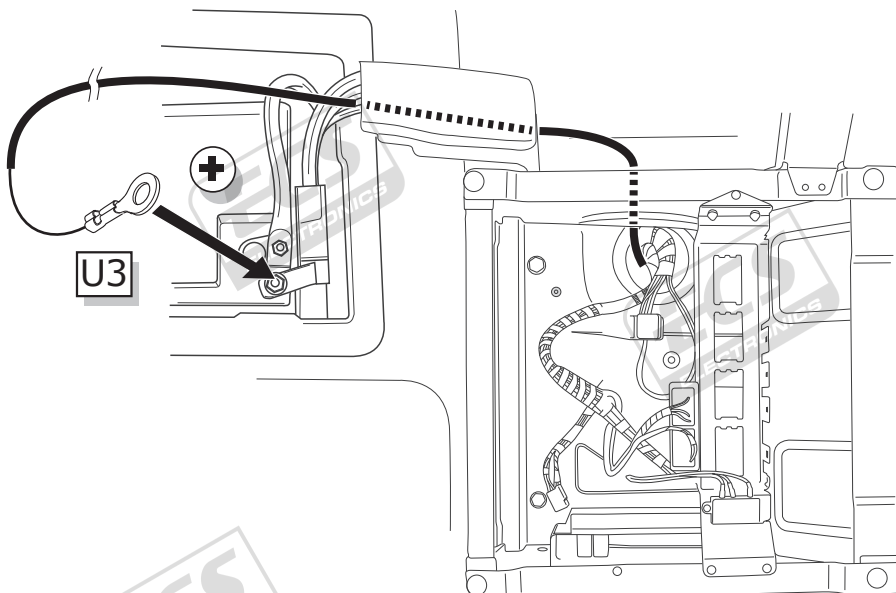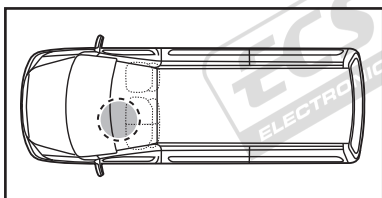



15

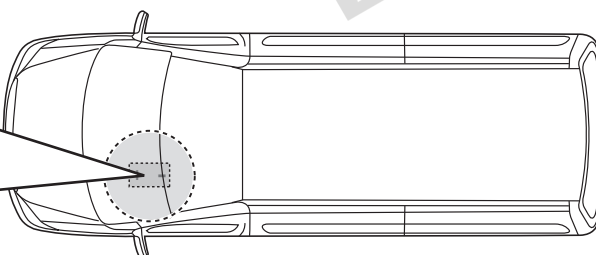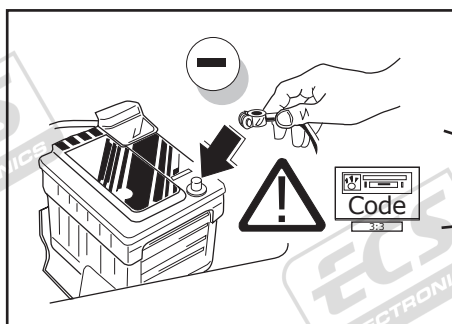

! TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

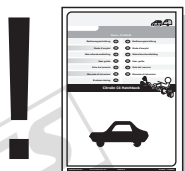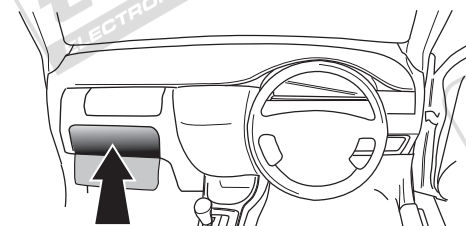

User guide




INFO

SOCKET CONNECTION



DIN/ISO 1724	←	🚗	⏏ 1-7	→	☀	⊞	☀
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	42W	3x21W	42W
Colour	Black/White	Blue	Brown	Black/Green	Grey/Red	Black/Red	Grey/Black

Reverse signal preparation

A

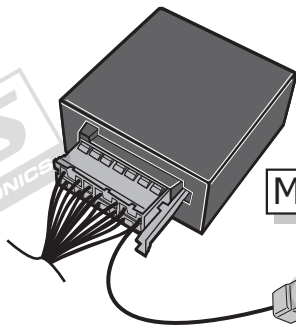


1

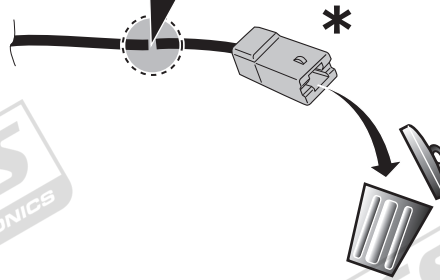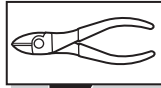

2



B

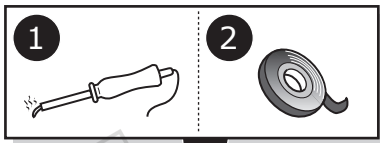

⚠ MAX = 21W

