


## Ford Ranger MK2





Partnr.: FR-077-D1U

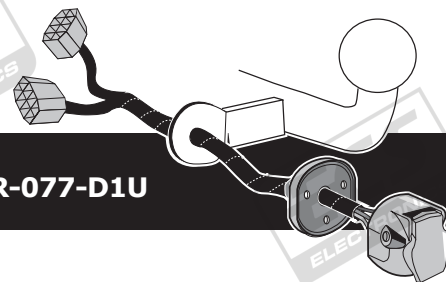


- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:  
[t.skinner@ecs-electronics.com](mailto:t.skinner@ecs-electronics.com) / 07440 202 052.




# Part list

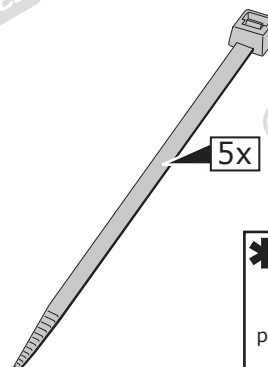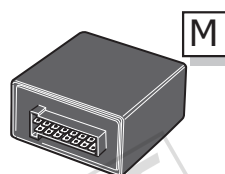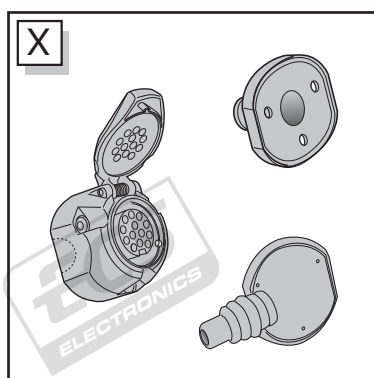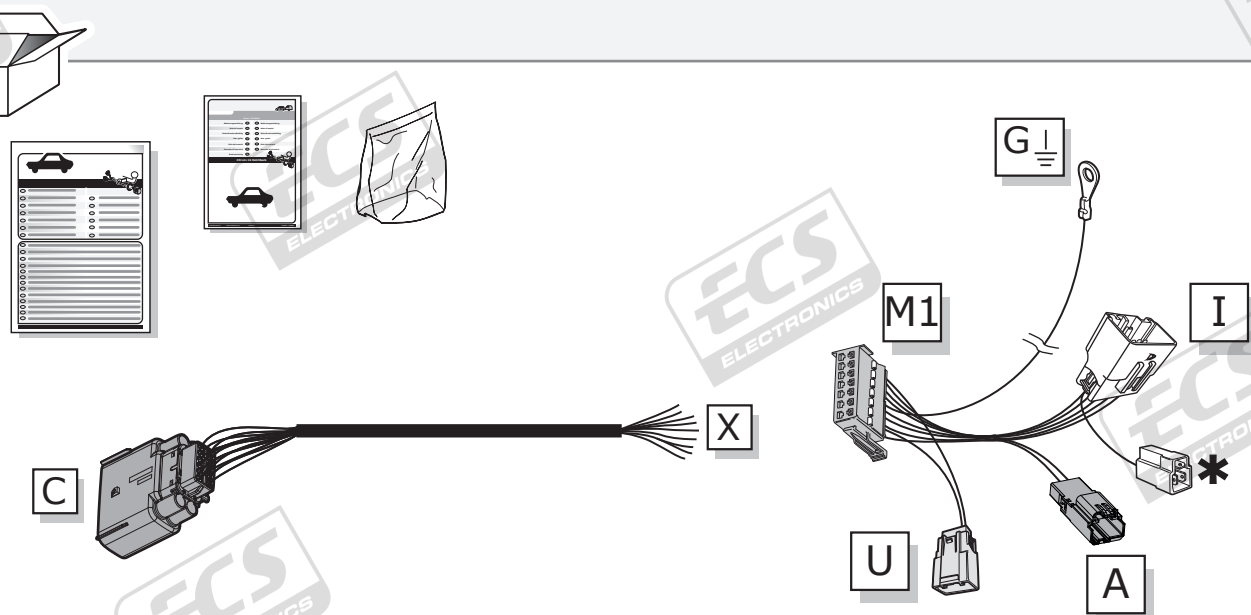


<p><b>* OPTION +15</b></p> <p>preparation for</p>	<p>+15</p> <p>Red</p>
---	-----------------------

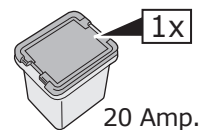



## ROUTING

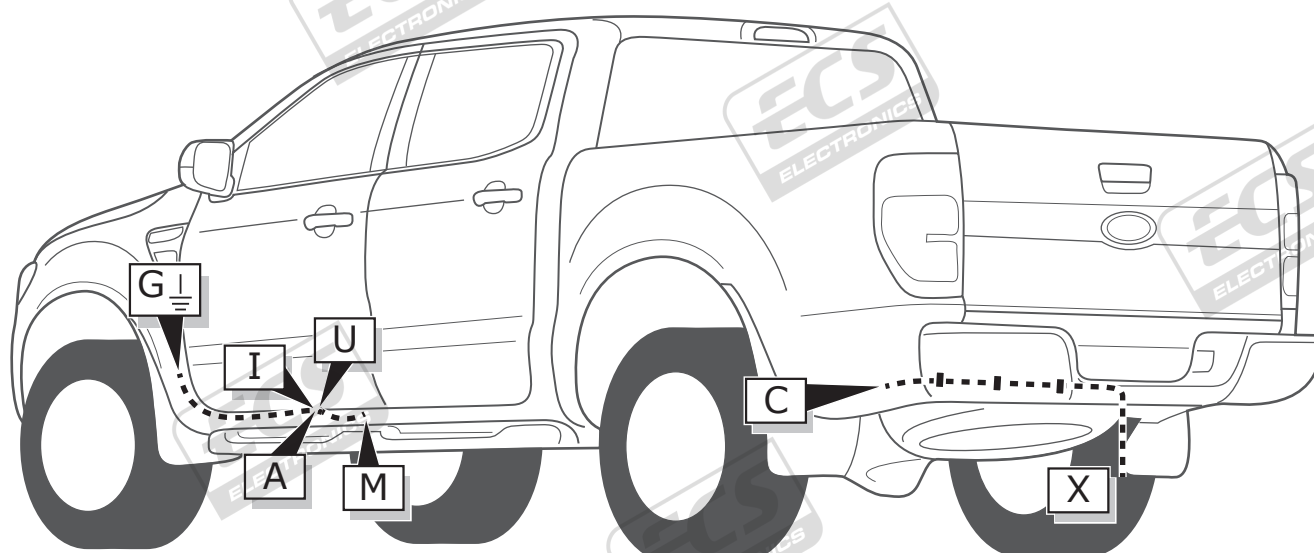



1

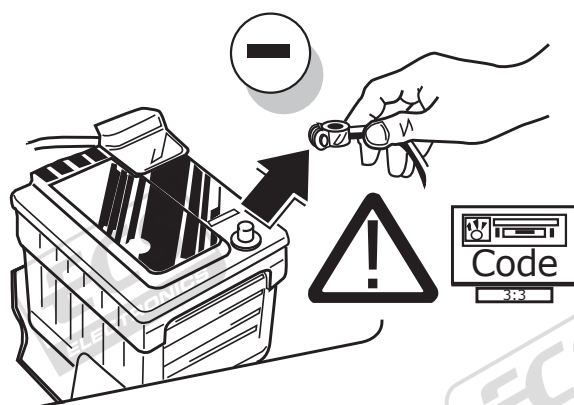

2

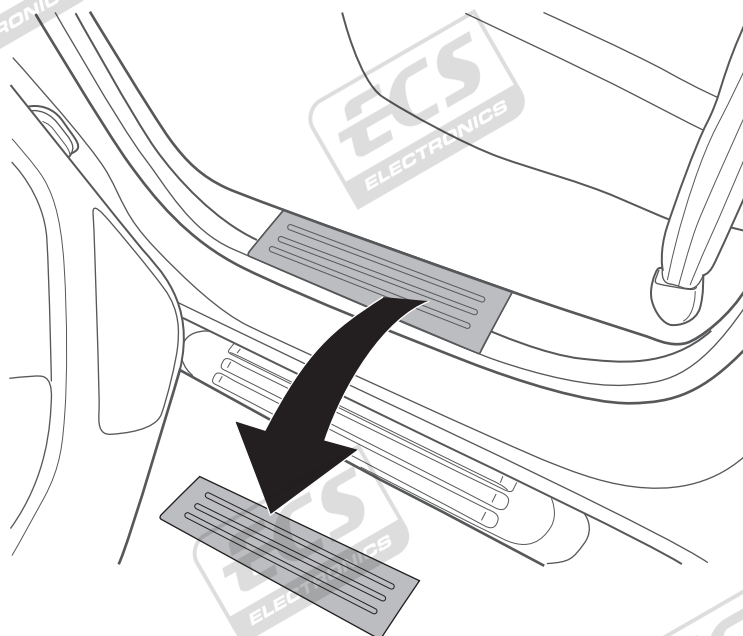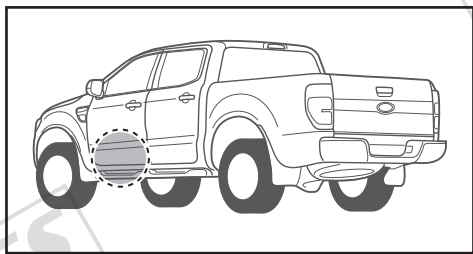


3

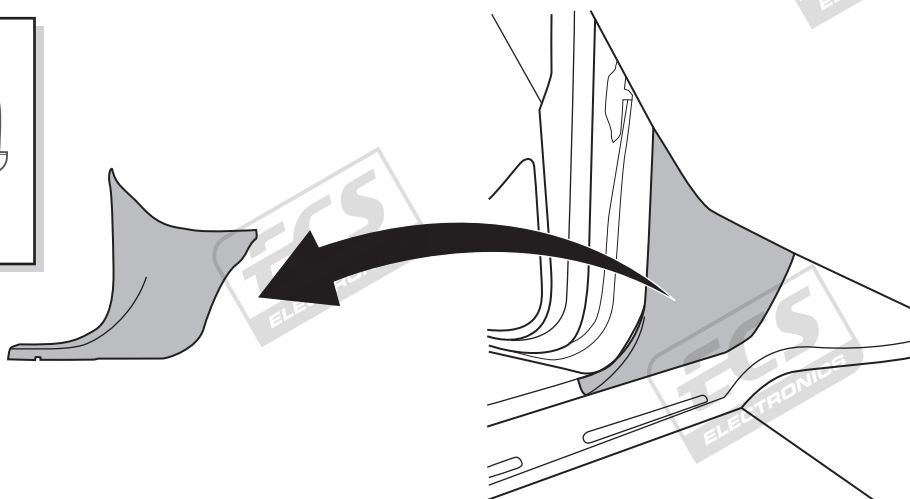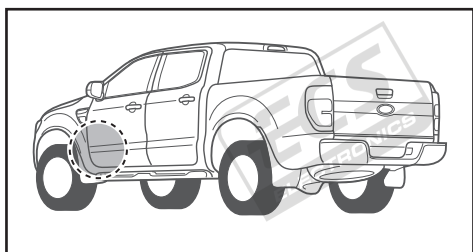


A


Option 1

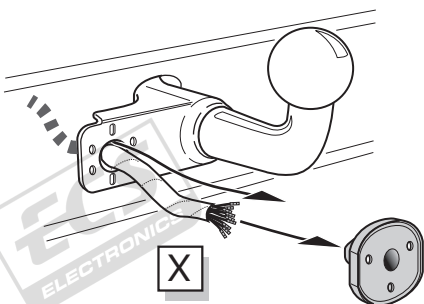

Option 2

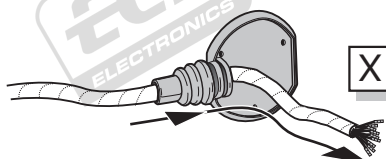

Option 3




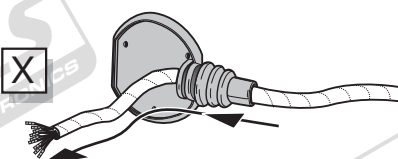


INFO

SOCKET CONNECTION






Pag. 10

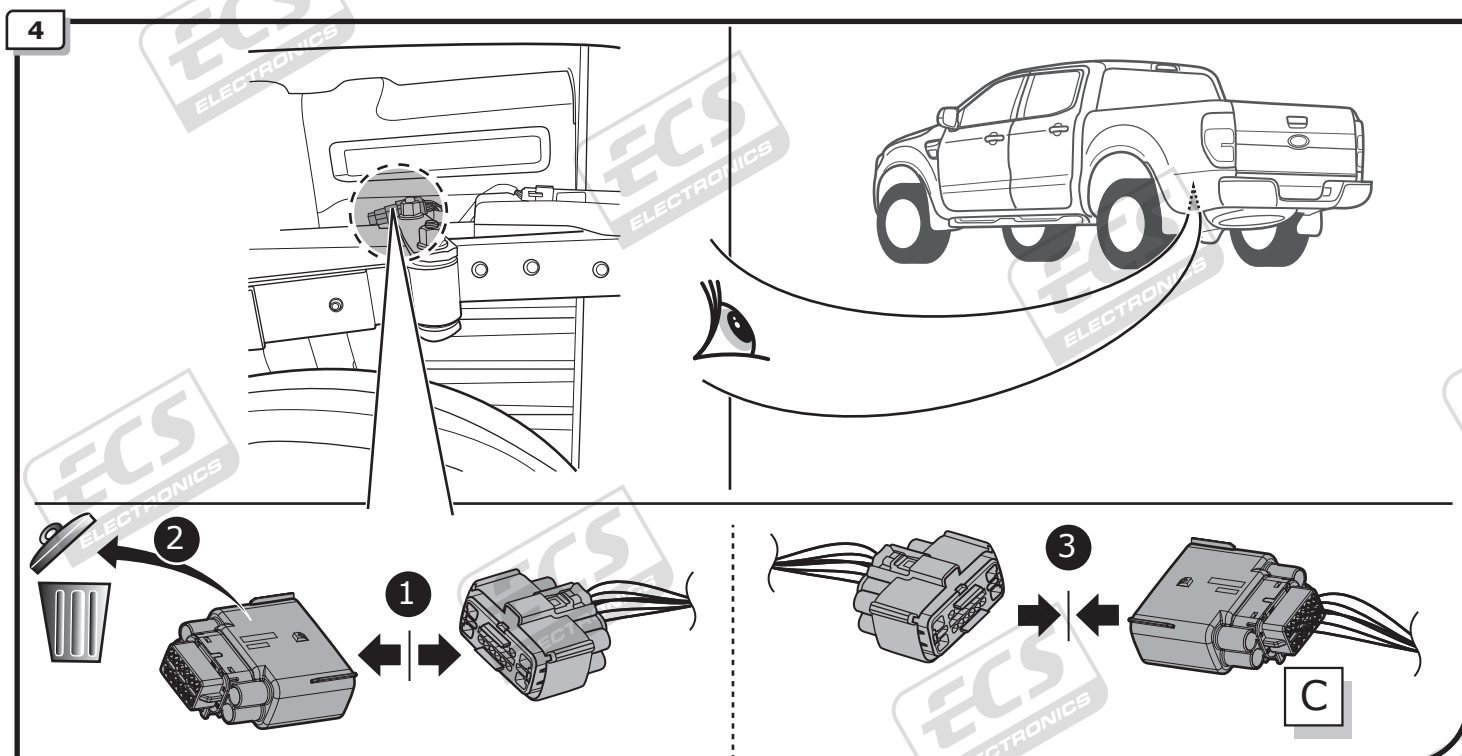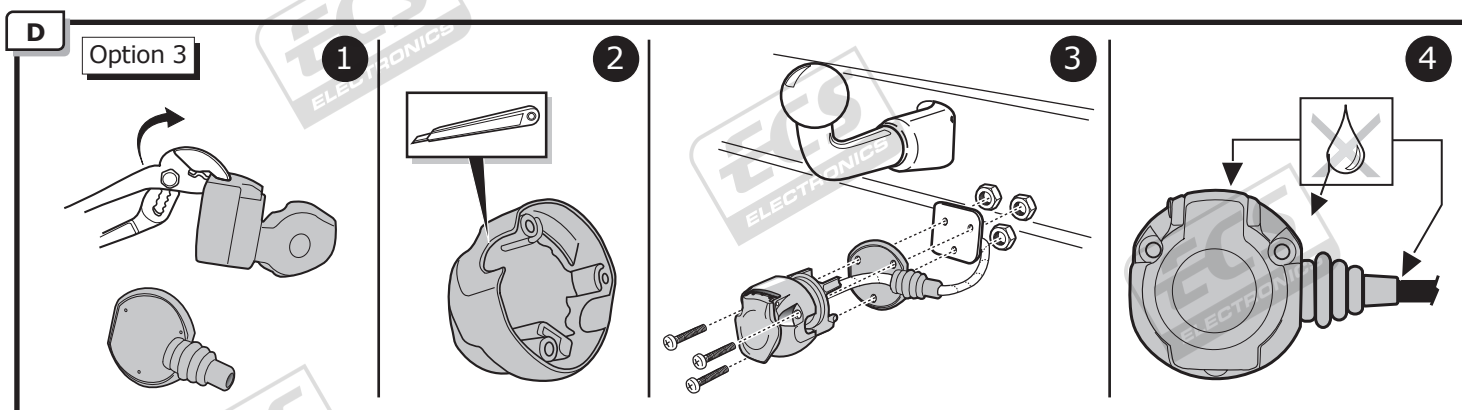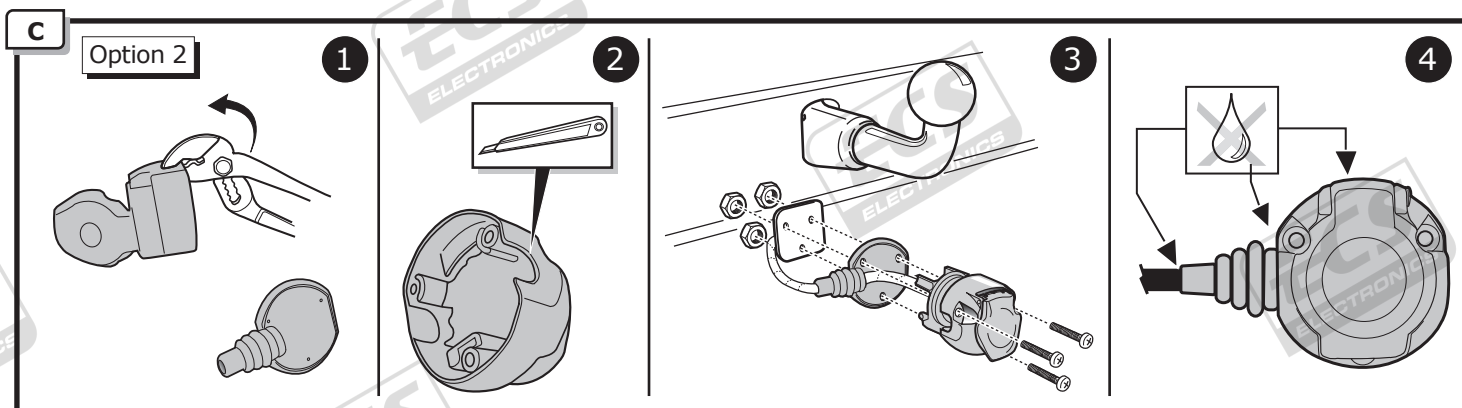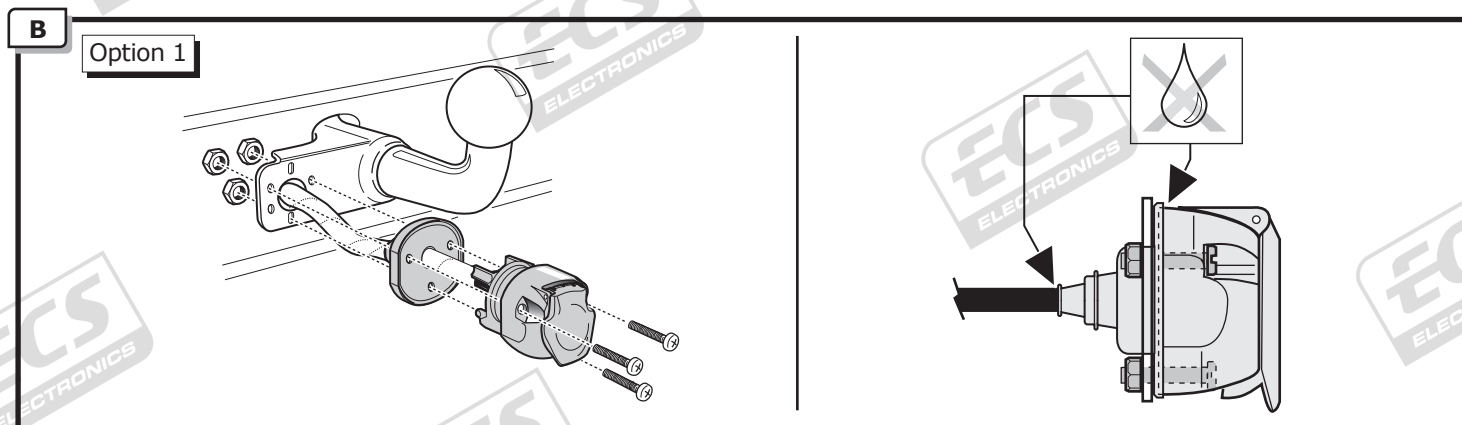






5

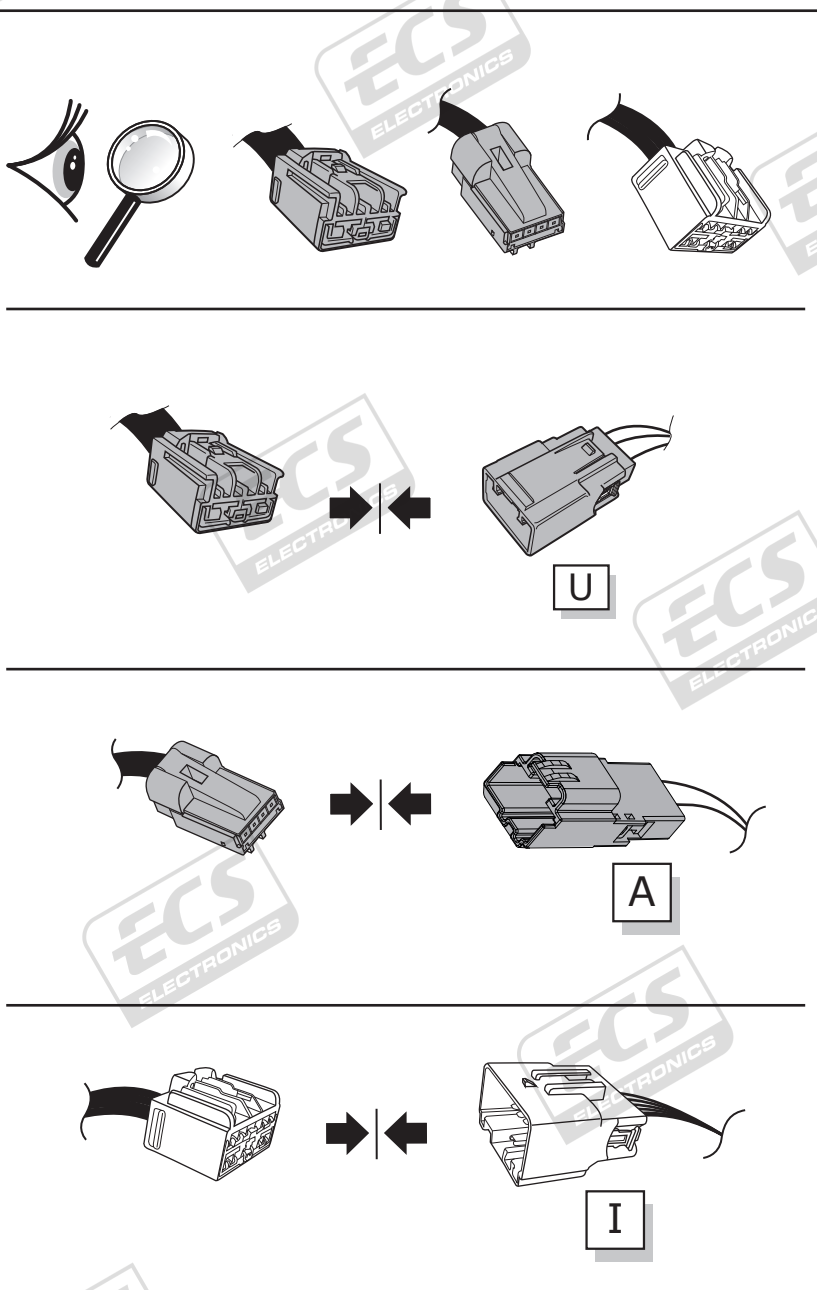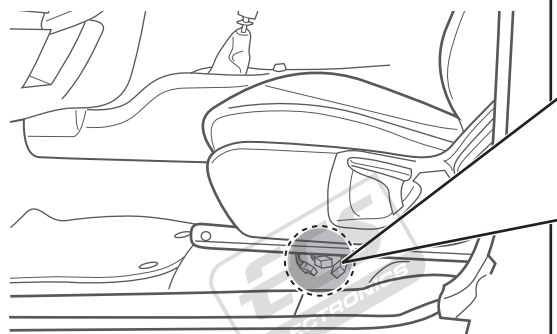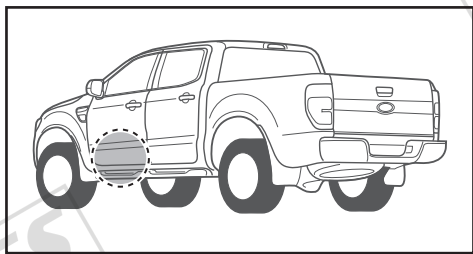

6

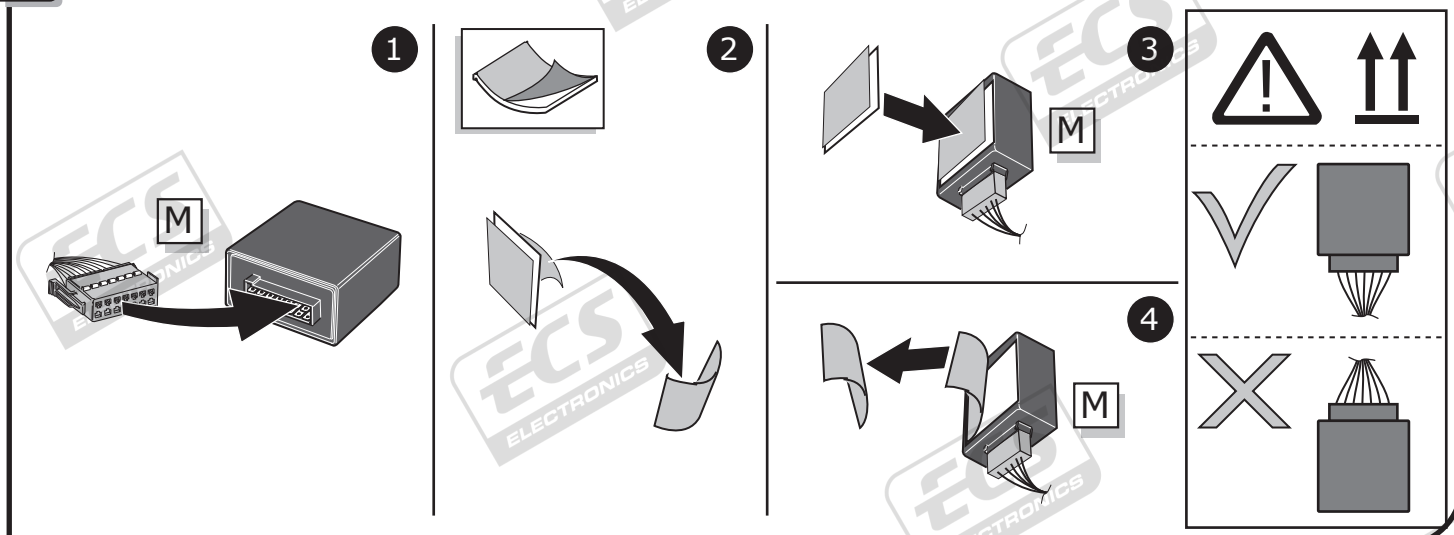

7

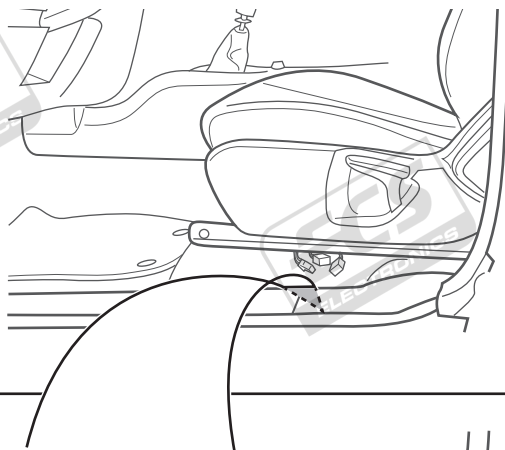
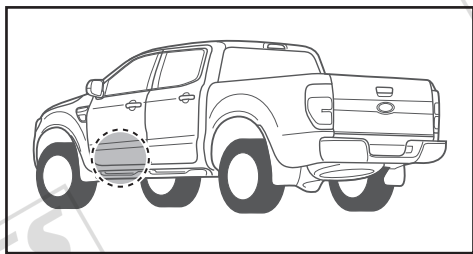


M





2

1

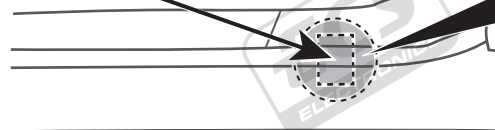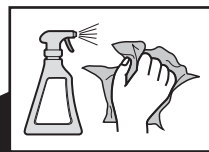


8

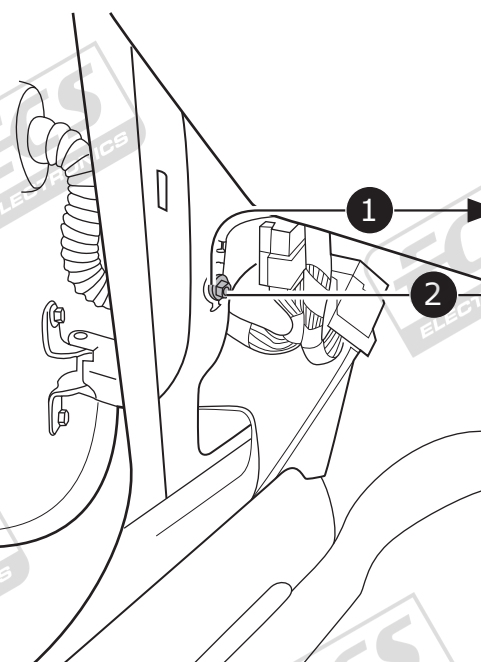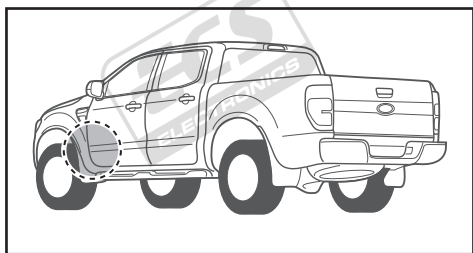


1


2

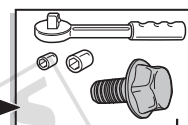


G

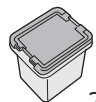**Option 1****Pos. 87**



20 Amp.

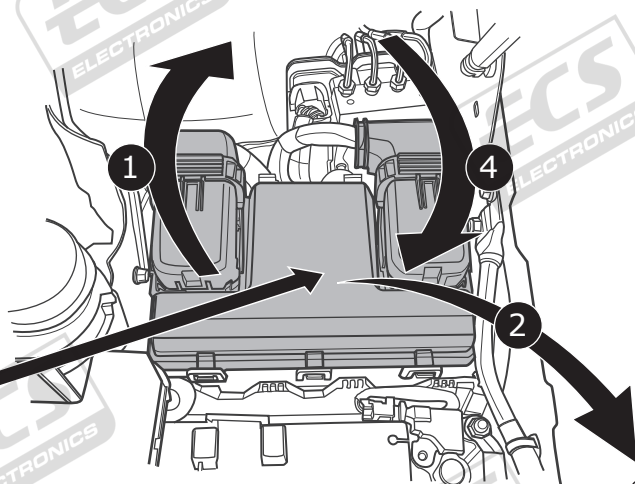

40 Amp.

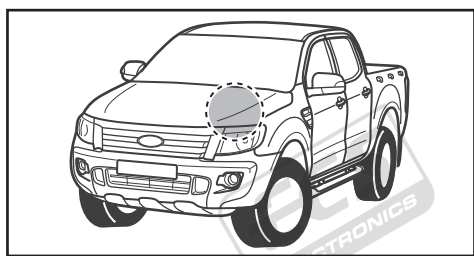**Option 2****Pos. 87**




20 Amp.

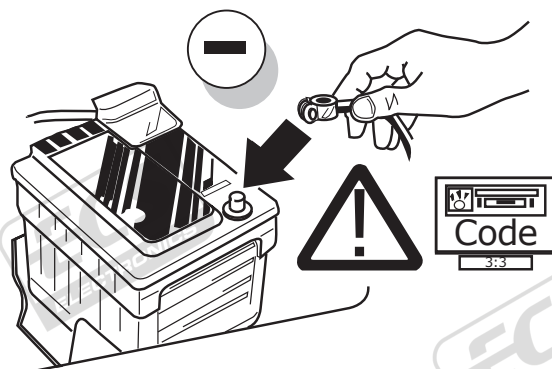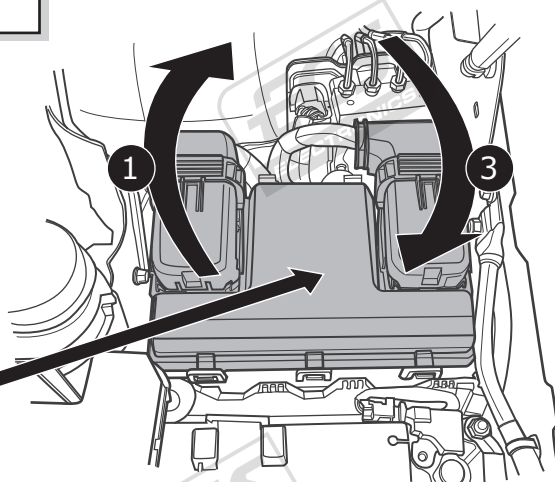





11

## Option 1

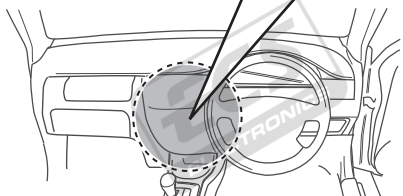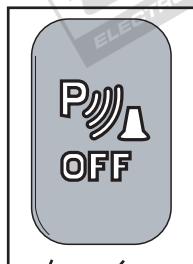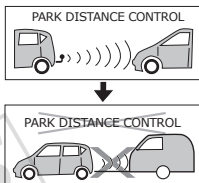**Manual PDC**

## Option 2

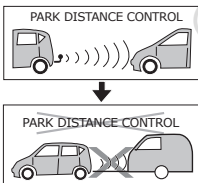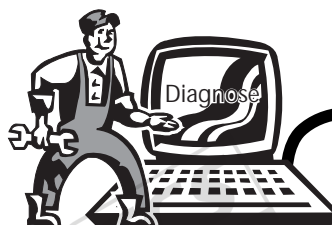**Auto PDC****C2**


12

**!** TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.








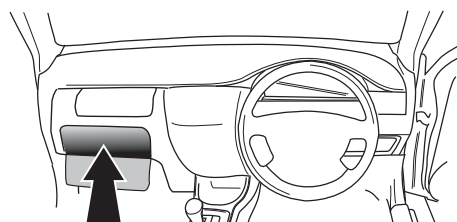


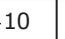


## INFO

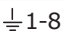REINSTALL TRIM.

13

**User guide**

## SOCKET CONNECTION

DIN/ISO 11446													
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	2x21W		21W	52W	3x21W	52W	2x21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red 1,00 mm <sup>2</sup>	Black	Black/ Red	Brown/ White	Red 2,50 mm <sup>2</sup>	White	-	White