


+REC (Rear Electric Centre)

Opel Zafira 2005- / Opel Astra H Stationwagon 2004-
Opel Astra H GTC 2004- / Opel Astra H 5 Drs. 2004-




Partnr.: OP-034-BHU

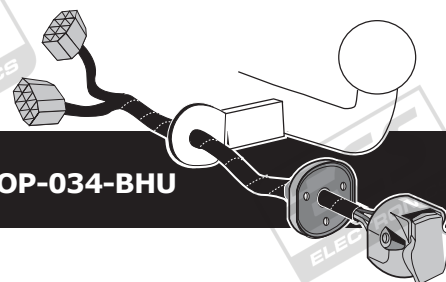


- Fitting instructions electric wiring kit tow bar with 12-N socket up to DIN/ISO Norm 1724.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.




Part list

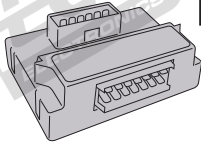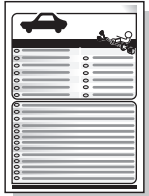

D

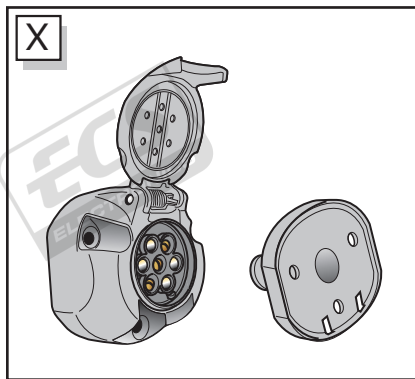

X

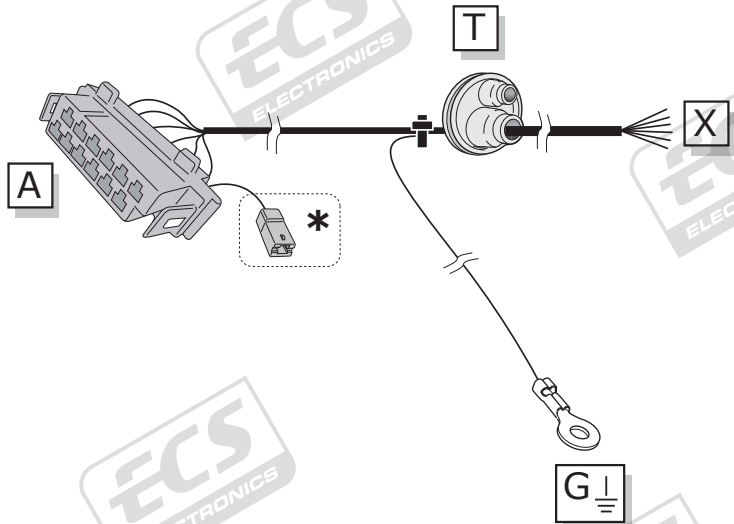


A

*

T

X

G

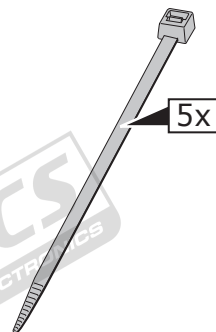


5x

* Reverse signal preparation



Pag. 12

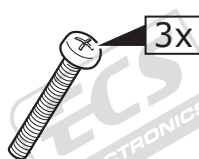


3x



3x


Astra H Stationwagon

ROUTING

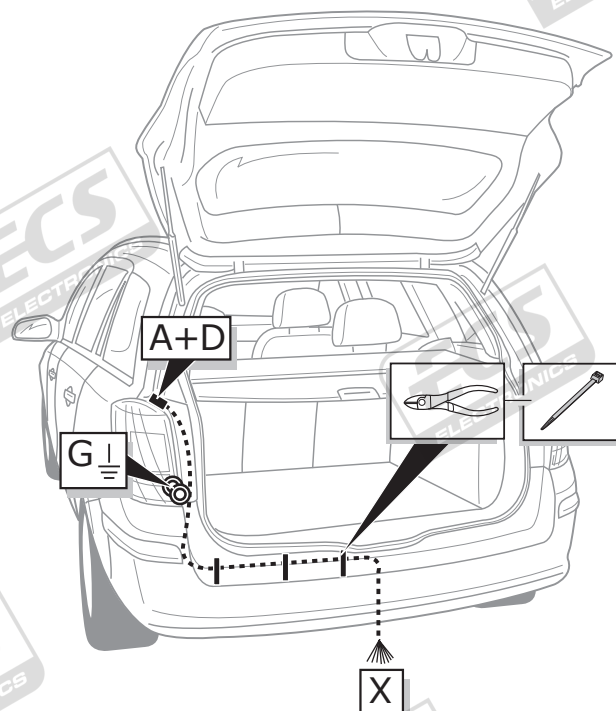


Astra H GTC

ROUTING

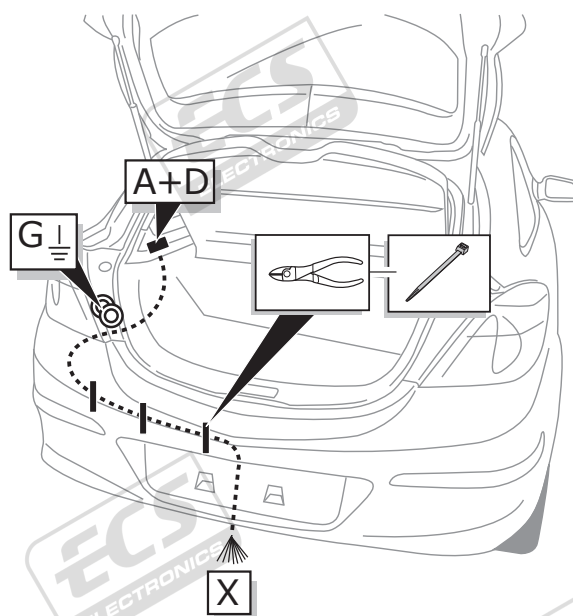


Astra H 5 Drs.

ROUTING

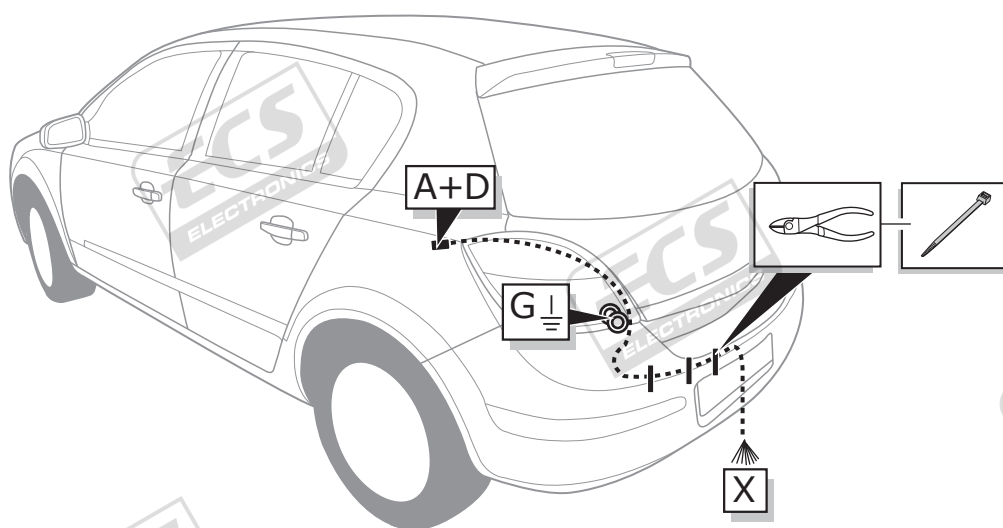


Zafira

ROUTING

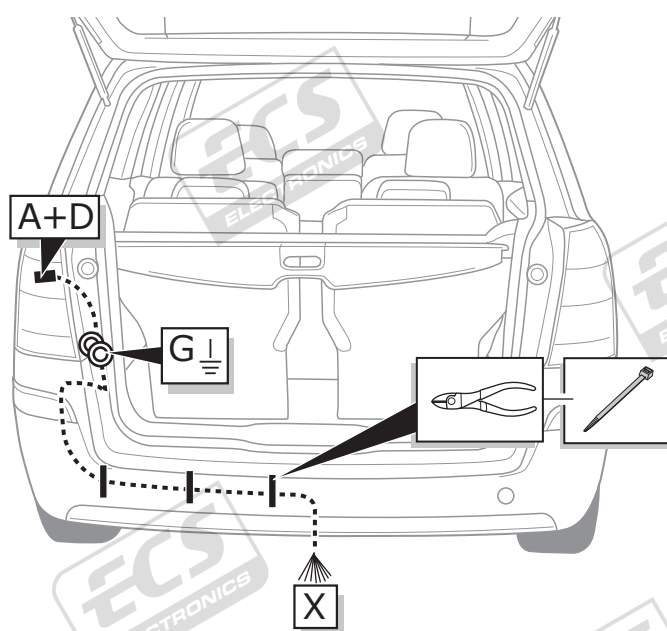


1

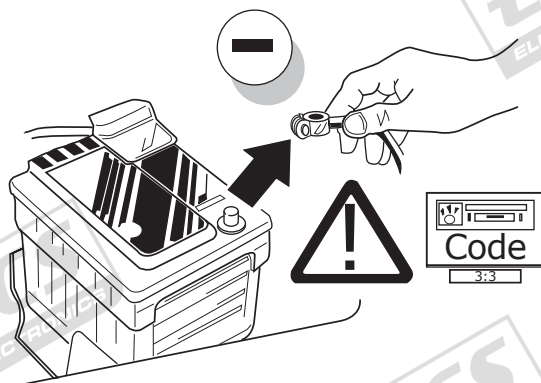


Astra H Stationwagon

2

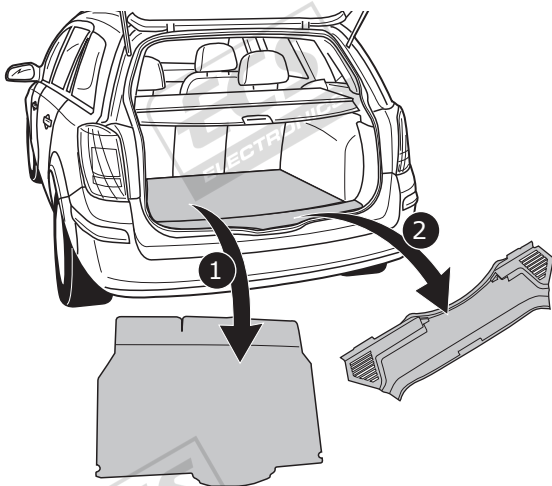


Astra H GTC

3

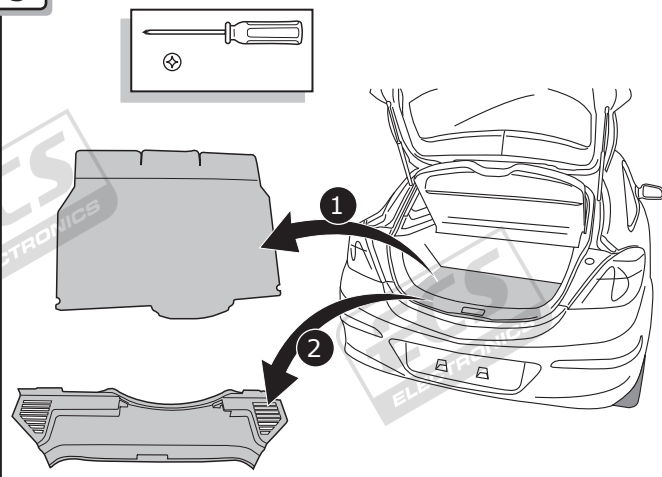


Astra H 5 Drs.

4

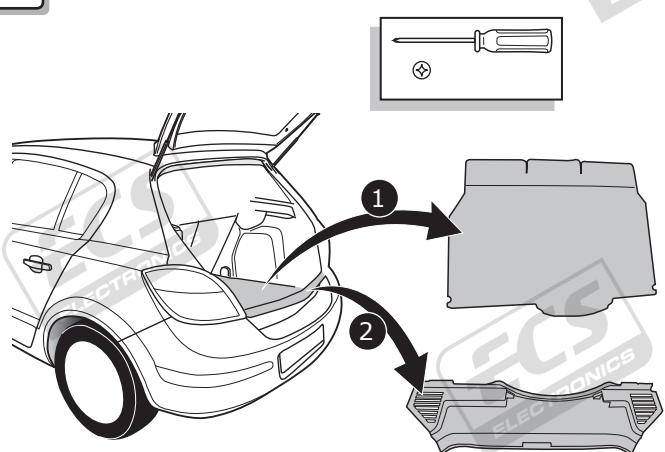


Zafira

5

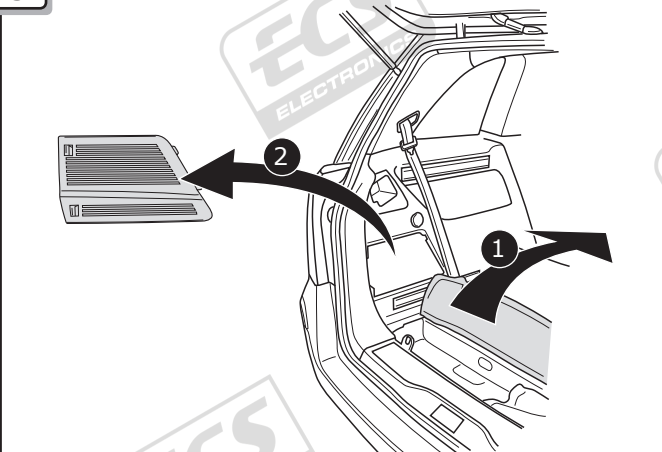


Astra H Stationwagon

6

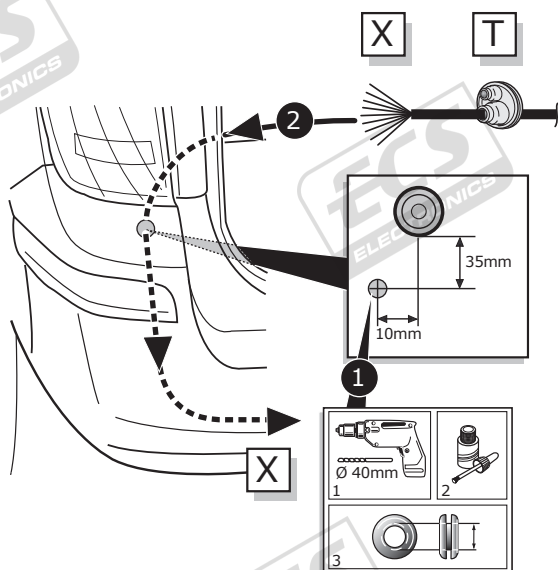


Astra H GTC

7

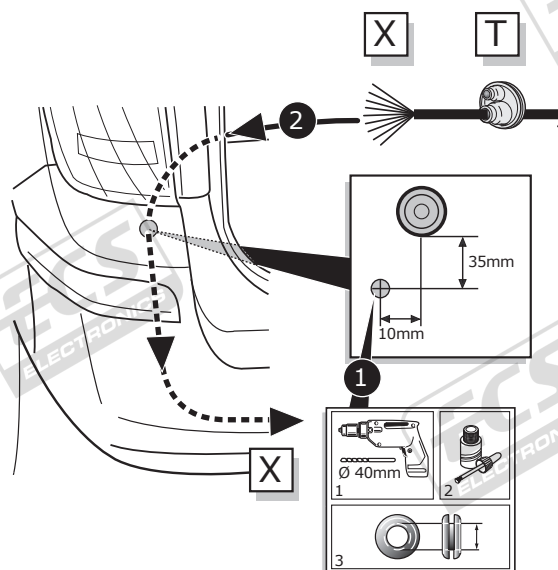


Astra H 5 Drs.

8

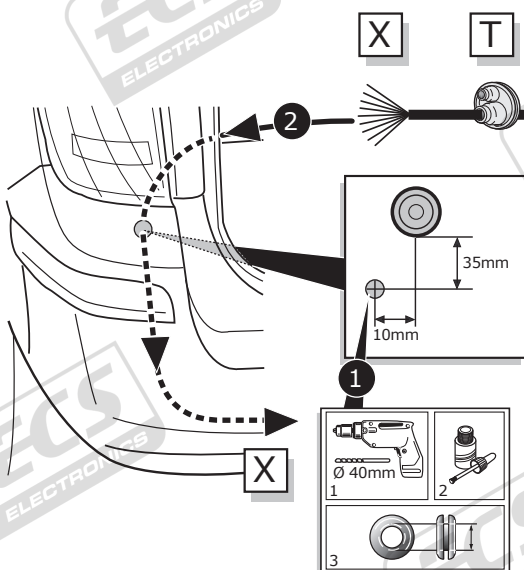


Zafira

9

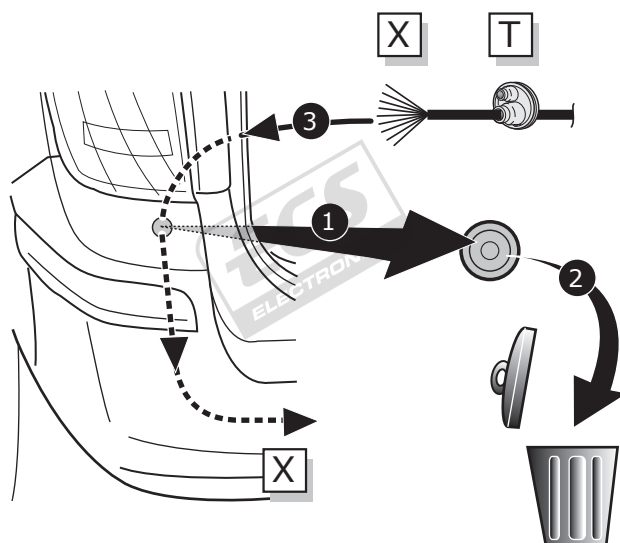

A

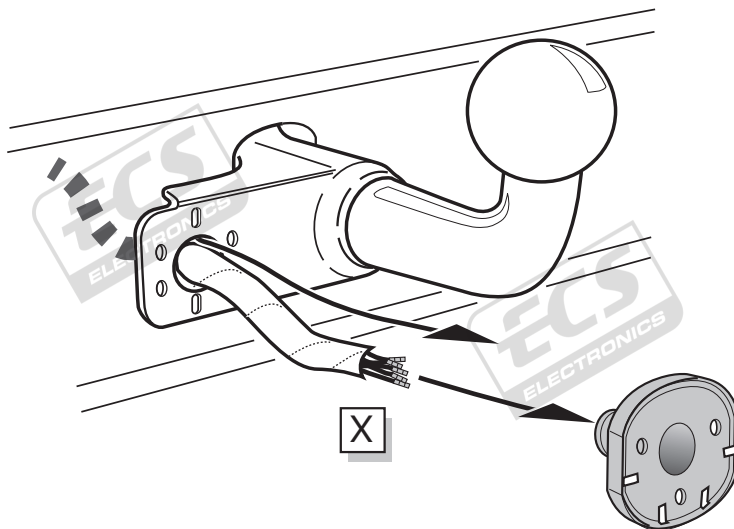



INFO

SOCKET CONNECTION









Pag. 11

B

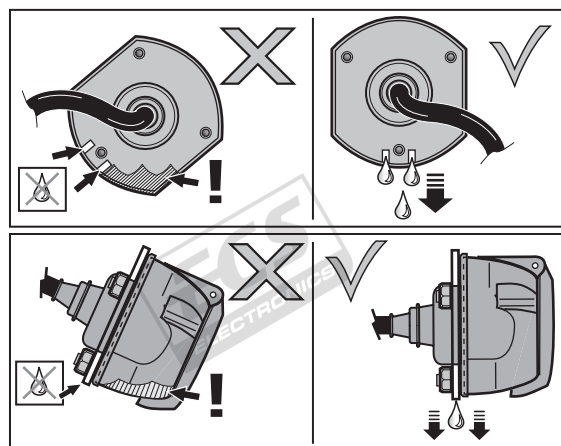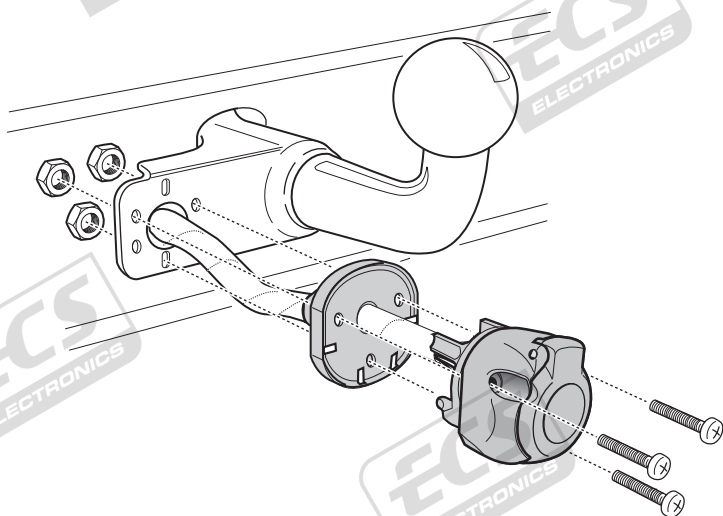


10

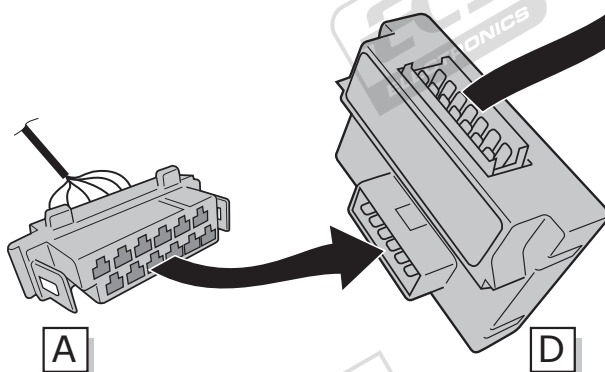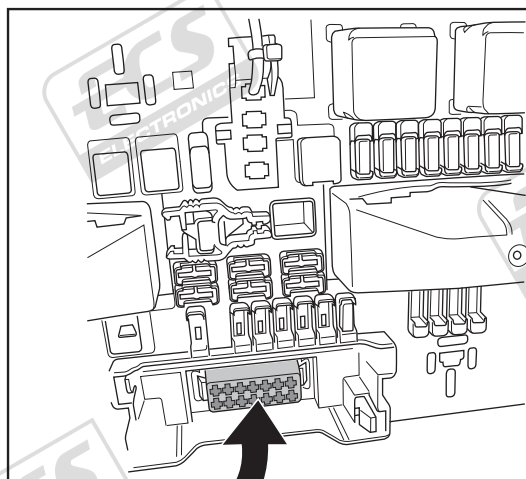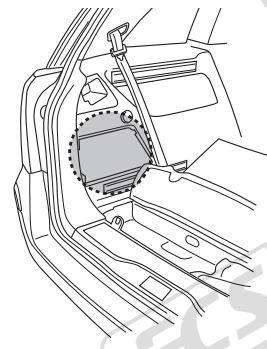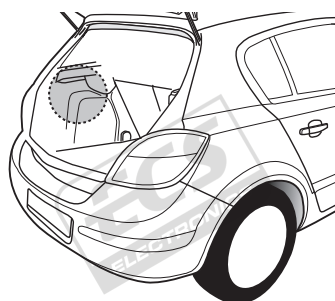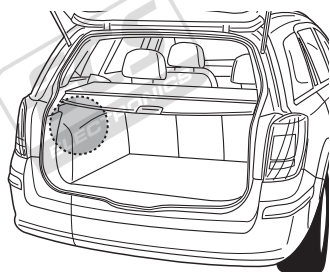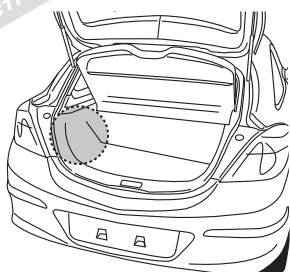


Astra H Stationwagon / Astra H GTC / Astra H 5 Drs.

11

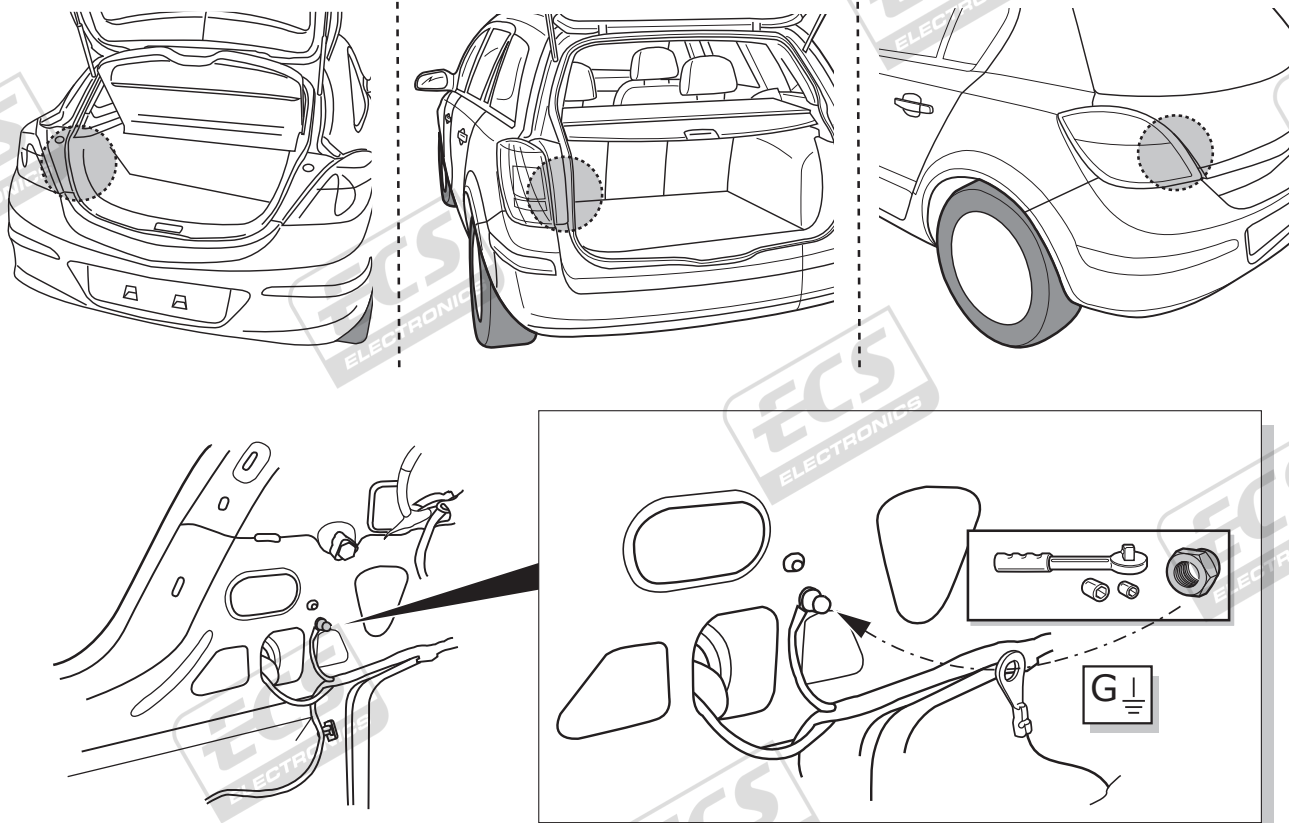


Zafira

12

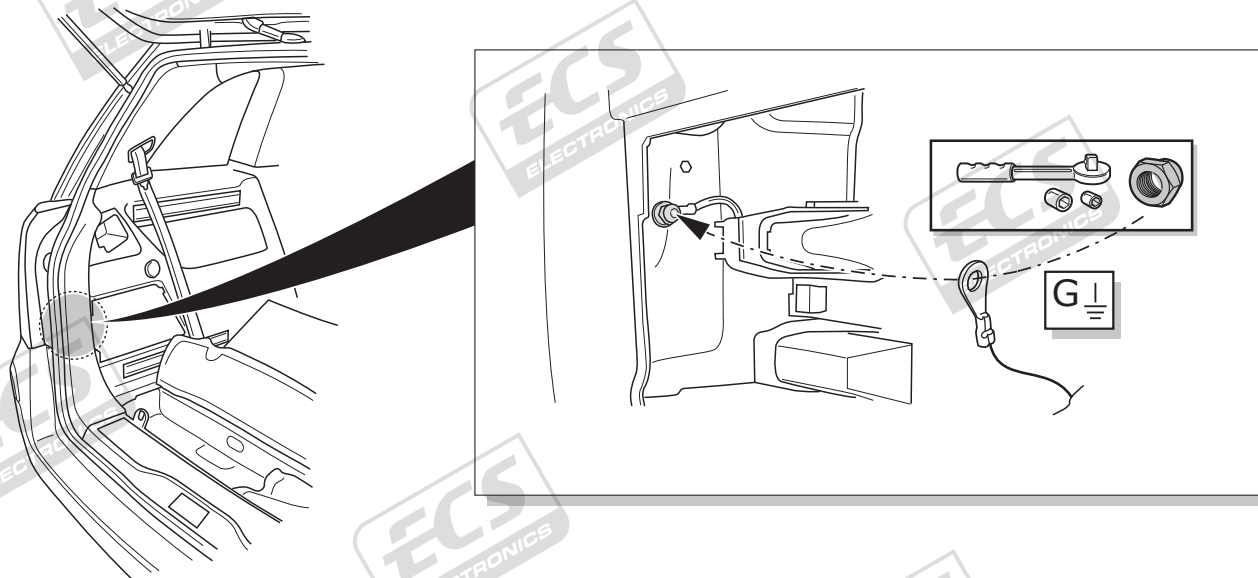



13

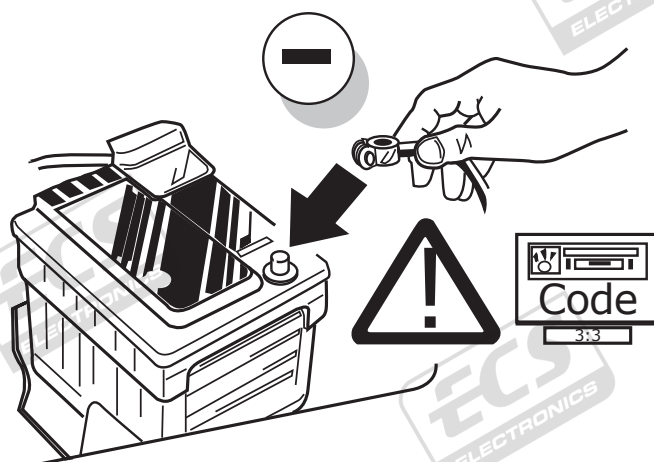

14

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.


15

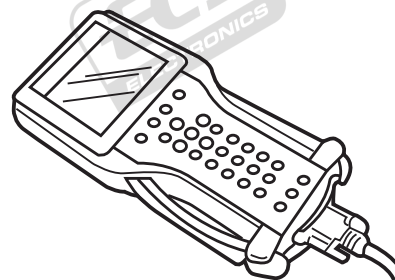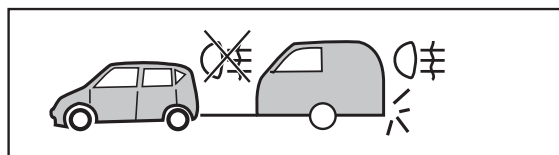

INFO

REINSTALL TRIM.

16

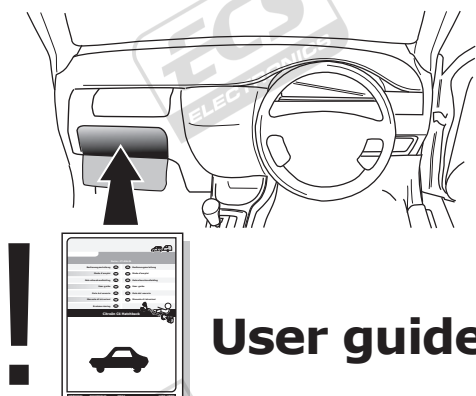

INFO


SOCKET CONNECTION

DIN/ISO 1724	←	🚗	⏏ 1-7	→	☀	STOP	☀
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	2x21W		21W	52W	3x21W	52W
Colour	Yellow	Blue	White	Green	Brown	Red	Black

Reverse signal preparation

A


1



2



B

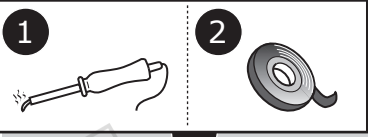

⚠ MAX = 21W

